# **Basic wall controls**



These controls are easy-to-use and allow you to loop through a variety of functions at the push of a button. Each control fits inside any 2 x 4 service box and comes with retaining screws and a white wall plate.

## Mode Control (Product # 611230)

Function: Operates the ventilation unit in one of 4 modes of operation:

- Recirculation mode
- Low-speed exterior exchange mode
- High-speed exterior exchange mode
- Stop mode (when the lights are off)

Wiring: Colour-coded, 4-conductor wire provides a direct wiring to the ventilation unit's terminal block.



### Speed Control (Product # 611229)

Function: Operates the ventilation unit in one of 4 modes speeds:

- Intermittent mode; low-speed 20-min exchange followed by, 40-min off or recirculation
- Low-speed exterior exchange
- High-speed exterior exchange
- Off (when the lights are off)

Wiring: Colour-coded, 4-conductor wire provides a direct wiring to the ventilation unit's terminal block.  $^{\lozenge}_{b}$ 

# VENTILATION O ⇌ int 20/40 O ⇌ min O ⇌ max Taldes

### 20-40-60 Timer (Product # 611228)

Function: Operates the ventilation unit in high-speed exterior exchange for the following durations:

- 20 minutes
- 40 minutes
- 60 minutes

Wiring: Colour-coded, 3-conductor wire provides a direct wiring to the ventilation unit's terminal block (b) Up to 3 timers can be used with a single ventilation unit, a long with on main control (611229, 611230, 611242-FC or 611227)

