



Getting Started:
A Guide to Using Aldes Selector™ Aeromatic HRV/ERV
v.1.6.0.3



Getting Started

A Guide to Using Aldes Selector™ Aeromatic HRV/ERV – v.1.6.0.3

Sections

The First Time You Load the Selector™	3
Selector™ User Interface.....	4
Enter User Information	5
Selecting the Correct Unit of Measurement	6
Creating a New Project	7
Project Details Page	8
Add a Unit to Your Project	10
Creating a Unit Selection	11
Light Commercial	11
Standard Commercial	14
Low-Profile Commercial	20
Advanced Commercial.....	27
Copy a Unit Selection.....	34
Delete a Unit Selection	35
Print Project Details.....	36
Print Individual Unit Details	37
Create a Unit Schedule	38
Import a Project	39
Liquid Coil Selection.....	40
Error Messages.....	44

The First Time You Load the Selector™

In an effort to better support our customers, we request that you register to use the software.


1. Please enter your information, then click the "Get Registration Key" button to send the information to our secure server. All users are pre-registered by e-mail. If you receive an e-mail asking you to contact your local sales office, please contact your local Aldes representative and they will process your request.

TIP: Manually enter USA in the country field.

The screenshot shows the "Software Registration" interface. On the left, there's a blue header with the "aldes" logo. The main area has two sections: "Informations client" and "Informations logiciel".
Informations client: Fields include: Civility (Mr.), Name (LAST NAME), First name (FIRST NAME), Company (EXAMPLE), Address (1234 Road St), ZIP code (01234), City (CITY), Country (USA selected), and E-Mail (YOUREMAIL@EMAIL.COM).
Informations logiciel: Fields include: Control value (1588898) and Registration key (empty field). Below this is a link: "Copy the key provided by email".
A blue modal window titled "Get registration key by email (do not close this window please)" contains a yellow key icon and a close button.
At the bottom are two buttons: "Cancel" with a red X icon and "Key validation" with a green checkmark icon.

2. Once the key has been sent to your e-mail, copy that key into the Registration Key field and click "Key Validation" to activate your copy. The software will load automatically.

Selector™ User Interface

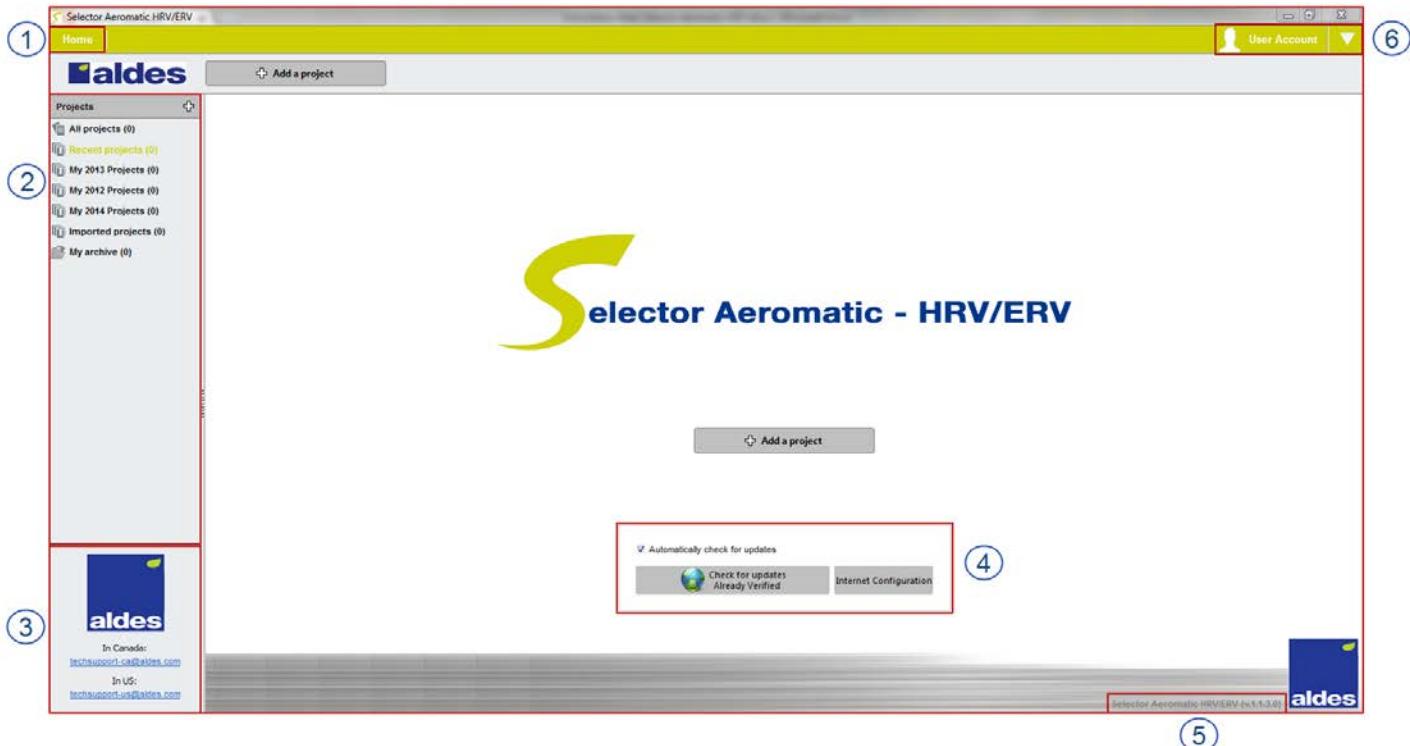


1. Home – Click to go to the main screen
2. Projects – Select previously made projects to edit, print or archive.
3. Contact us – Please use these e-mail addresses to contact an Aldes employee for assistance
 - In Canada: techsupport.ca@aldes.com
 - In US: techsupport.us@aldes.com
4. Update software – Use these links regularly to check for software updates
 - Automatically check for updates (checkbox)
 - Check for updates (button)
 - Internet Configuration (button)
5. Version – The currently installed version of the software
6. User account – Enter user information and select appropriate units and language

NOTE: Internet configuration button (4) has no impact on the current version of the software, but will be used in later versions.

Enter User Information

Enter your information for the purpose of sending and receiving e-mails.

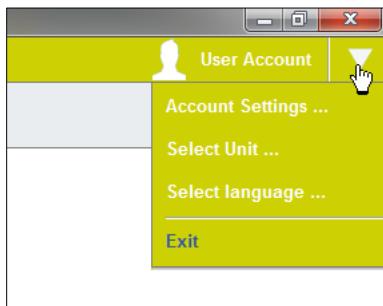

1. Click on the User Account drop-down icon, then **Account Settings**.
2. Enter your e-mail address.
3. Select your technical support contact: American Aldes or Aldes Canada.
4. Click **Confirm Change** to save information.

Account Settings

Personal Information

Thank you for your e-mail address information so that our teams can respond to your request.

EMail Address:

Favorite contact:

Use a custom logo

Current logo: (Max size 50x190)

Options sending mail

Sends configuration:

SMTP server address:

Port:


Login:

Password:

Secure connection

Selecting the Correct Unit of Measurement

Whether you are in the United States or Canada, you can select the units that are most appropriate for your project.

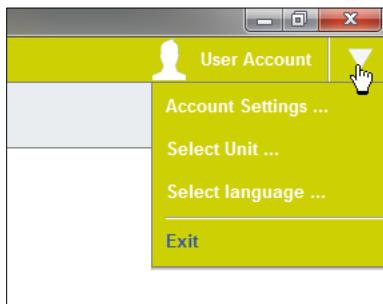

1. Click on the User Account drop-down icon, then **Select Unit**.
2. Select the desired unit for airflow, temperature, dimensions, etc.
3. Click **Confirm Change** to save information.


NOTE: Selecting a currency has no impact on the current version of the software, but will be used in later versions.

A screenshot of a 'Unit of Measure' configuration dialog box. It contains sections for Airflow (set to CFM), Temperatures (set to °F), Dimensions (set to in), Pressure (set to in.H₂O), Power (set to Hp), and Water Flow (set to GPM). Below this is a 'Currency' section with a dropdown set to 'Usd'. Underneath is a note 'As of 21/02/2012:' followed by exchange rates: - 1 \$ = 0.99 C\$; - 1 € = 1.32 C\$; and - 1 € = 1.33 \$. There are three buttons: 'Automatic Search', 'Manual Editing', and 'Reset'. At the bottom are 'Cancel' and 'Confirm Change' buttons, with 'Confirm Change' being highlighted.

Creating a New Project

Follow the steps below to create a new project.


1. Add a new project by clicking any of these buttons.

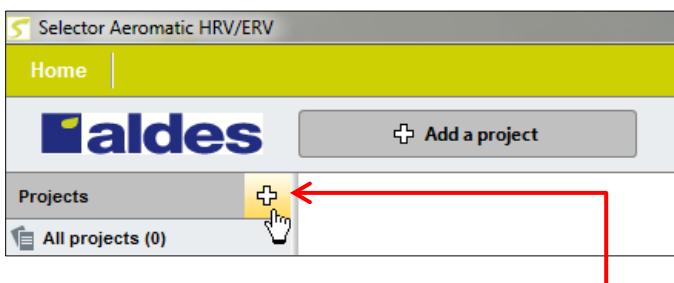

TIP: After leaving the Home page, the above button will add a new project.

2. After clicking **Add a project**, enter the project name and click **Continue**.

TIP: Enter the name of the customer first, then the project name. This will make it easier to keep track of created projects. Ex: Engineering Office – Building Project.

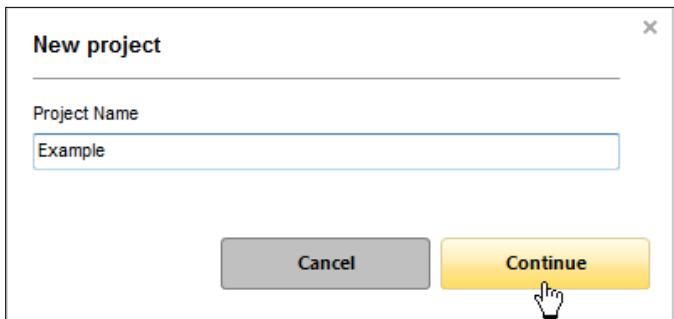

3. Enter project and customer information.


Project Details Page

The screenshot shows the 'Project Details Page' with several sections and numbered callouts:

- Section 1:** Project name input field ('Example') and 'Confirm Change' button.
- Section 2:** Location selection dropdowns for Country, State, and City, followed by a 'ASHRAE standard conditions' link.
- Section 3:** Customer information form with fields for Company Name, Address, City, Contact, Phone, ext., E-mail, and Date (set to 1/13/2014).
- Buttons:**
 - 4: Print the entire project
 - 5: Create project schedule
 - 6: Export project
 - 7: Send project by e-mail
 - 8: Obtain a quote for this project
 - 9: Archive project

1. Project name – To modify project name, enter new name and click **Confirm Change**.
2. Location – Select the location of the project to insert ASHRAE standard conditions into your project data. This information can be entered manually, if necessary.
3. Customer information – Enter the information of your customer and/or project.
4. Print the entire project – Create a PDF showing project information and equipment selection(s). You can individually print the project information, unit selections, unit specifications sheets, or any combination of the three.


NOTE: There must be a complete selection saved to print unit information.

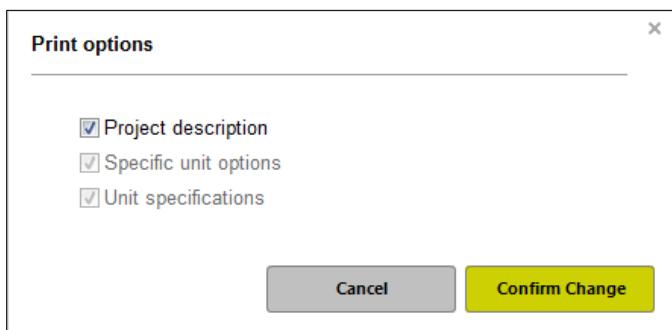

5. Create project schedule – Create a schedule using an Excel spreadsheet for the entire project. This file type has been selected for the ease of editing by any party.


6.  Export project – Saves the unit as a file type that can be e-mailed and viewed by anyone using this software. See [Import a Project](#) for additional details.
7.  Send project by e-mail – Sends the project to an Aldes representative for assistance.

NOTE: It is important that the correct Aldes location is selected. See [Enter User Information](#) for additional details.

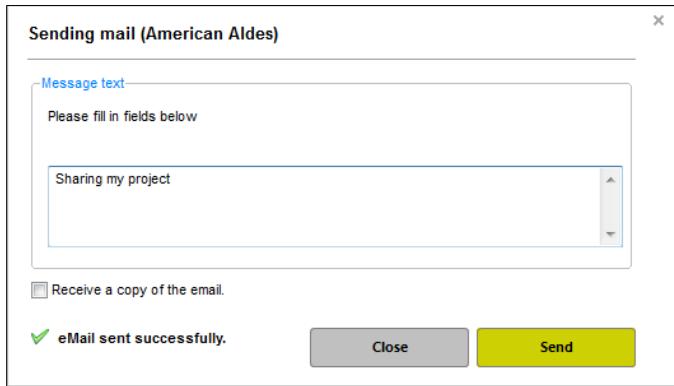

8.  Obtain a quote for this project – Sends the project to an Aldes representative for a quotation of the project.

NOTE: It is important that the correct Aldes location is selected. See [Enter User Information](#) for additional details. Quotations will only be sent to an Aldes representative. For a list of representatives, please contact Aldes or visit www.aldes.ca or www.aldes.us

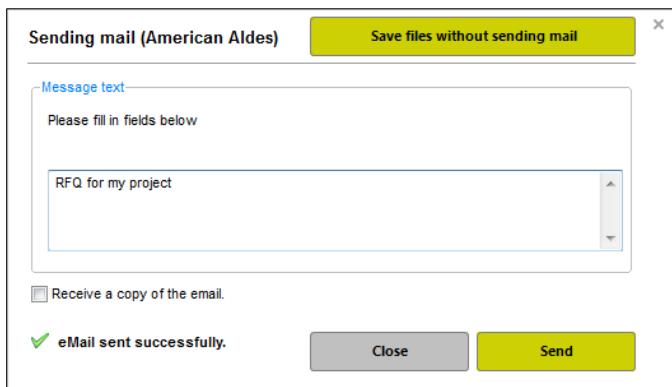


9.  Archive the current project – Sends the project to “My archive” folder under projects. See [Selector User Interface](#) for additional information. Once the project has been archived, the project can be permanently deleted.

Add a Unit to Your Project

After creating or selecting a project, a unit can be added at any time by clicking the **Add a unit** button at the top left of the screen.


1. Click the **Add a unit** button to add a unit to your project.

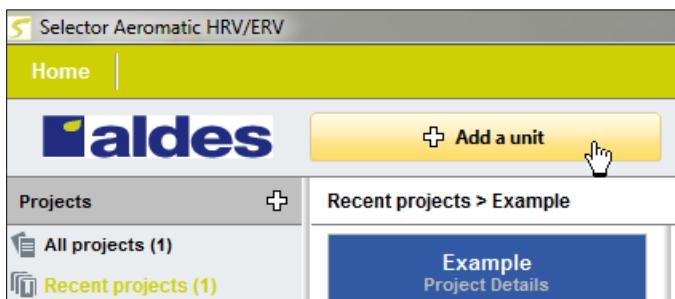

2. Based on project requirements, select the most appropriate Aeromatic series. Primary unit applications, options, and ranges are indicated in the table.

AEROMATIC™					
	Add Residential	Add Light Commercial	Add Standard Commercial	Add Low-profile Commercial	Add Advanced Commercial
Airflow (cfm)					
Min	30	200	500	500	1000
Max	250	1100	4500	3500	11000
Installation					
Inner	X	X	X	X	X
Outdoor			X	X	X
Defrost					
Evacuation cycles	X	X	X	X	X
Recirculation cycles	X	X		X	X
Pre-heat			X	X	X
Face & Bypass Damper					X
VFD on wheel				X	X
Recovery Type					
Polypropylene cube	X	X	X	X	X
Aluminum cube	X	X	X	X	X
Enthalpic cube	X	X	X	X	X
Polymer wheel				X	X
Optional heating and/or cooling					
post heating					X
post cooling					X

3. Verify the selection and click **Continue** to proceed. See [Creating a Unit Selection](#) for additional information.

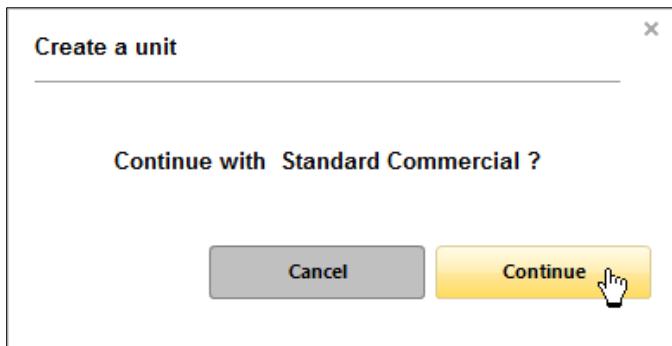

Creating a Unit Selection

Continuing from step 3 in [Add a Unit to Your Project](#), you must enter specific unit information to finalize the selection. Depending on the Aeromatic series, there are various options that require special attention.

Light Commercial

Recent projects > Example

UNIT TAG # Recovery Type Core Choice

Tag #1 Fixed Plate Polypropylene

Fresh Air 0 CFM Exhaust Air 0 CFM
External Static Pressure - Fresh Air 0 in.H2O External Static Pressure - Exhaust Air 0 in.H2O

Characteristic Temperature Selection Defrost mode Control Options Choice of unit

- Usage: interior
- Mounting: suspended
- Washable aluminum filter
- Fan: centrifugal reaction
- Voltage: 120VAC
- Frequency: 60 Hz
- Power: 660 Watt

To copy a unit, select the unit and press Ctrl + C and Ctrl + V.
Close sidebar

1. Enter unique unit tag #.
2. Select desired recovery type and core choice.

NOTE: Some models are only available with fixed-plate cores. This can be changed at any time during the selection process to see how core selection impacts the unit's performance.


UNIT TAG #	Recovery Type	Core Choice
ERV-1	Fixed Plate	Enthalpic

3. Enter the airflow data.

Fresh Air 500 CFM	Exhaust Air 530 CFM
External Static Pressure - Fresh Air 0.25 in.H2O	External Static Pressure - Exhaust Air 0.4 in.H2O

NOTE: An error message **Outside of airflow range** will be displayed if the information entered is outside the capacity for the selected series. If this occurs, please review and modify the selected series.

4. The *Characteristic* tab shows standard unit features and options. In the other commercial series, this tab requires selection of specific options pertaining to the configuration and application.

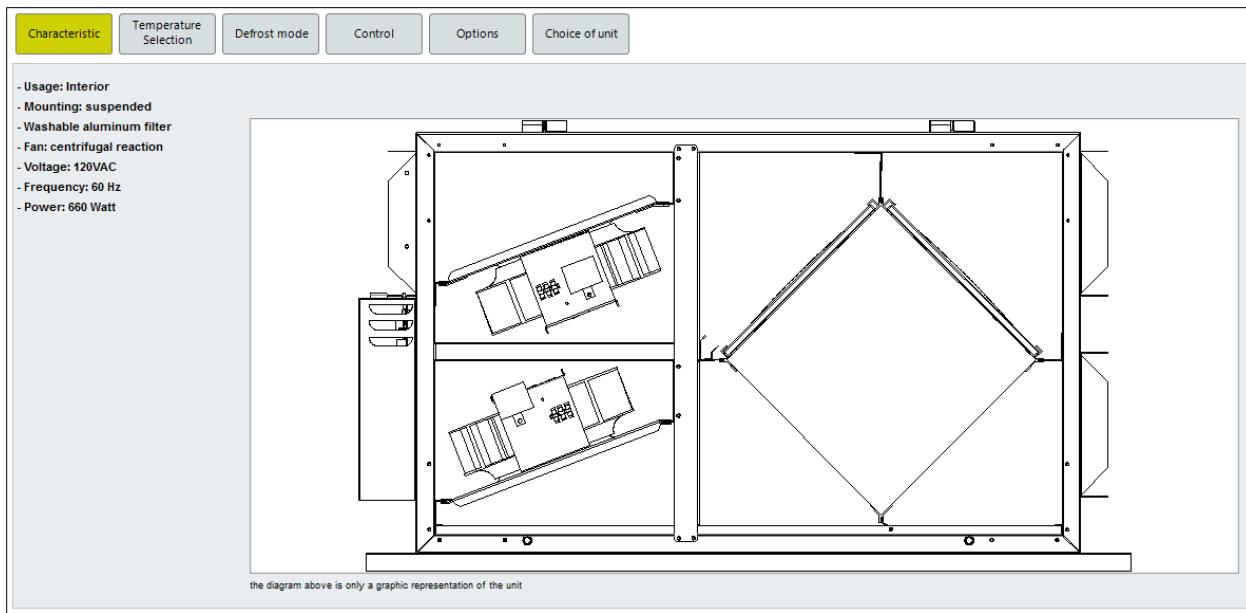

5. To move between tabs, simply select the desired tab. It is **strongly advised** that the tabs be filled out from left to right to avoid any conflict in entered data or selected options.
6. *Temperatures* – Review and make any necessary changes. The default temperatures are based on ASHRAE standard design conditions for the selected city. If no city was selected, the temperatures will be zero.

Winter	
FDB	FWB
Outside Air 38 °F	38 °F
Indoor Air 70 °F	58 °F
Summer	
FDB	FWB
Outside Air 92 °F	77 °F
Indoor Air 75 °F	63 °F
Altitude 228 in	


7. *Defrost mode* – Select the desired frost control (required). This is determined by the entered temperature information and selected core technology.

Frost Control	
Method	
Exhaust Defrost	▼
Frost control not required based on on design conditions	

TIP: For additional details on a specific option, click the info button .


8. *Control* – Information on the unit controls is noted here. In the other commercial series, this tab requires selection of specific options pertaining to the configuration and application.

9. *Options* – Currently, the only option for this series that can be selected via the software is the spare filter type. The standard filter shipped in the unit is a washable aluminum mesh. For additional options, please view the unit specifications sheet.
10. *Choice of unit* – Click on the *Calculate* button to evaluate and determine the most appropriate unit based on the entered information.

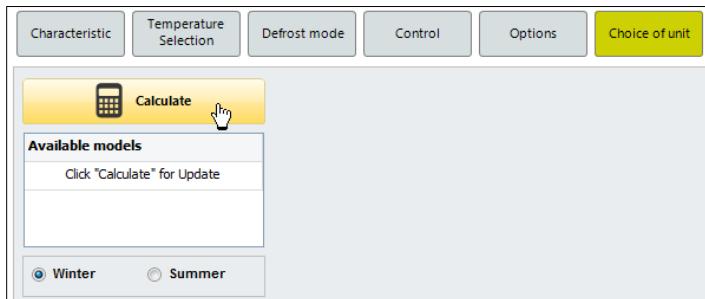

11. If multiple unit models are shown, this is because the entered information falls within the range of these models. Select the desired model to display unit information.


NOTE: Light Commercial models have only one type of fan and no options that impact electrical data, so unique electrical and fan data are not shown in this series the way they are for other models.

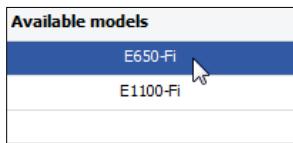

12. To save the unit selection to your project, click *Save*.



13. After a unit has been saved, a brief description will be added to that unit in the project list.

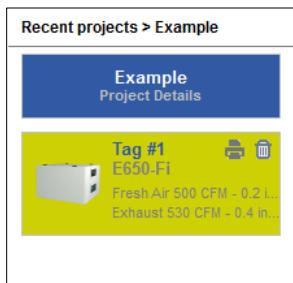

Standard Commercial

UNIT TAG # Tag #1	Recovery Type To select ...				
Fresh Air 0 CFM Exhaust Air 0 CFM					
External Static Pressure - Fresh Air 0 in.H2O External Static Pressure - Exhaust Air 0 in.H2O					
Set-up	Temperature Selection	Defrost mode	Motor_Blower	Options	Choice of unit
<p>Installation Interior</p> <p>Hood None</p> <p>Duct Configuration Config-1 </p> <p>Casing Horizontal Casing</p> <p><input type="checkbox"/> Mirror configuration</p> <p>Supply Motorized Damper Default</p> <p>Exhaust Motorized Damper Default</p> <p>Roof Curb: None</p> <p style="text-align: center;">the diagram above is only a graphic representation of the unit</p>					

1. Enter unique unit tag #.
2. Select desired recovery type and core choice.

NOTE: Some models are only available with fixed-plate cores. This can be changed at any time during the selection process to see how core selection impacts the unit's performance.

UNIT TAG # ERV-1	Recovery Type Fixed Plate	Core Choice Enthalpic
---------------------	------------------------------	--------------------------


3. Enter the airflow data.

Fresh Air 500 CFM	Exhaust Air 530 CFM
External Static Pressure - Fresh Air 0.25 in.H2O	External Static Pressure - Exhaust Air 0.4 in.H2O

4. The *Set-up* tab shows the configuration and installation options of the unit.
 - Installation* can be either an *Interior* installation (ex: in a mechanical room) or an *Exterior* installation (ex: on a rooftop).

- b. *Hood* applies only to the *Exterior* installation units. When set to *OA and EA*, unit will be equipped with hoods on the fresh air intake and exhaust air. When set to *None*, the unit will not be equipped with hoods.
- c. *Duct Configuration* – Click the info button  to select the proper duct configuration for the unit. Click **Confirm Change** to select the *Duct Configuration*.

NOTE: The available configurations depend on the installation. Example: For Exterior installations, Config-1 is not available with pre-heating frost control.

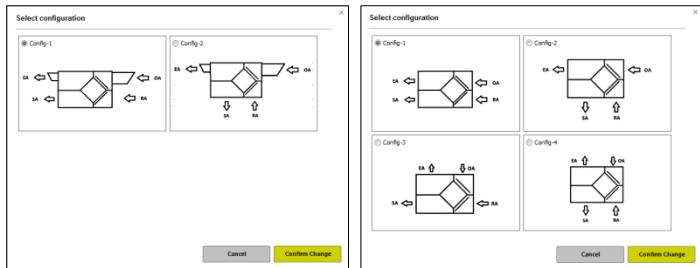

- d. *Casing* can be either a *Horizontal Casing* or a *Vertical Casing*. The *Horizontal Casing* will have the supply air and return air duct positioned at the ends of the unit, while the *Vertical Casing* will have them under the unit.

NOTE: The choice in *Casing* shall reflect the choice in *Duct Configuration*.

- e. Select *Mirror configuration* when the clearance needs the doors to be on the opposite side of the unit. The airflows and duct configuration will remain the same, but the access doors will be on the opposite side of the unit.
- f. *Supply Motorized Damper* and *Exhaust Motorized Damper*. Select *Default* to include motorized damper; *with end switch* if you need the damper position confirmation; or *None* if you do not need dampers.

NOTE: The *Supply Motorized Damper* is mandatory when the *Frost Control Method* is set to *Exhaust Defrost* (*Frost Control Method* will be covered in the **Defrost Mode** tab).

- g. *Roof Curb* – Select *14" Insulated Roof Curb* if you need an insulated roof curb; *14" Non-Insulated Roof Curb* if you do not need insulation with your roof curb; or *None* if you do not need any roof curb at all.
- 5. To move between tabs, simply select the desired tab. It is **strongly advised** that the tabs be filled out from left to right to avoid any conflict in entered data or selected options.
- 6. *Temperatures* – Review and make any necessary changes. The default temperatures are based on ASHRAE standard design conditions for the selected city. If no city was selected, the temperatures will be zero.

Winter			
	FDB	FWB	
Outside Air	38	°F	38 °F
Indoor Air	70	°F	58 °F
Summer			
	FDB	FWB	
Outside Air	92	°F	77 °F
Indoor Air	75	°F	63 °F
Altitude	228	in	

7. *Defrost mode* – Select the desired frost control (required). Given your unit configuration and design temperature, *Selector™* will indicate if a *Frost Control Method* is required.

Frost Control	
Method	
Exhaust Defrost	
Frost control not required based on on design conditions	


In the Standard Series, the available *Frost Control Methods* are:

- a) *Exhaust Defrost*
- b) *Electric Pre-Heat* (on exterior installation unit only)
- c) *None*

NOTE: If no *Frost Control Method* is selected, it is the customer's responsibility to avoid any formation of ice or frost on the core. For technical assistance regarding this, please contact your local Aldes representative.

TIP: For additional details on a specific option, click the info button .

8. The *Motor_Blower* tab shows configuration and control of the motor/fan assembly.

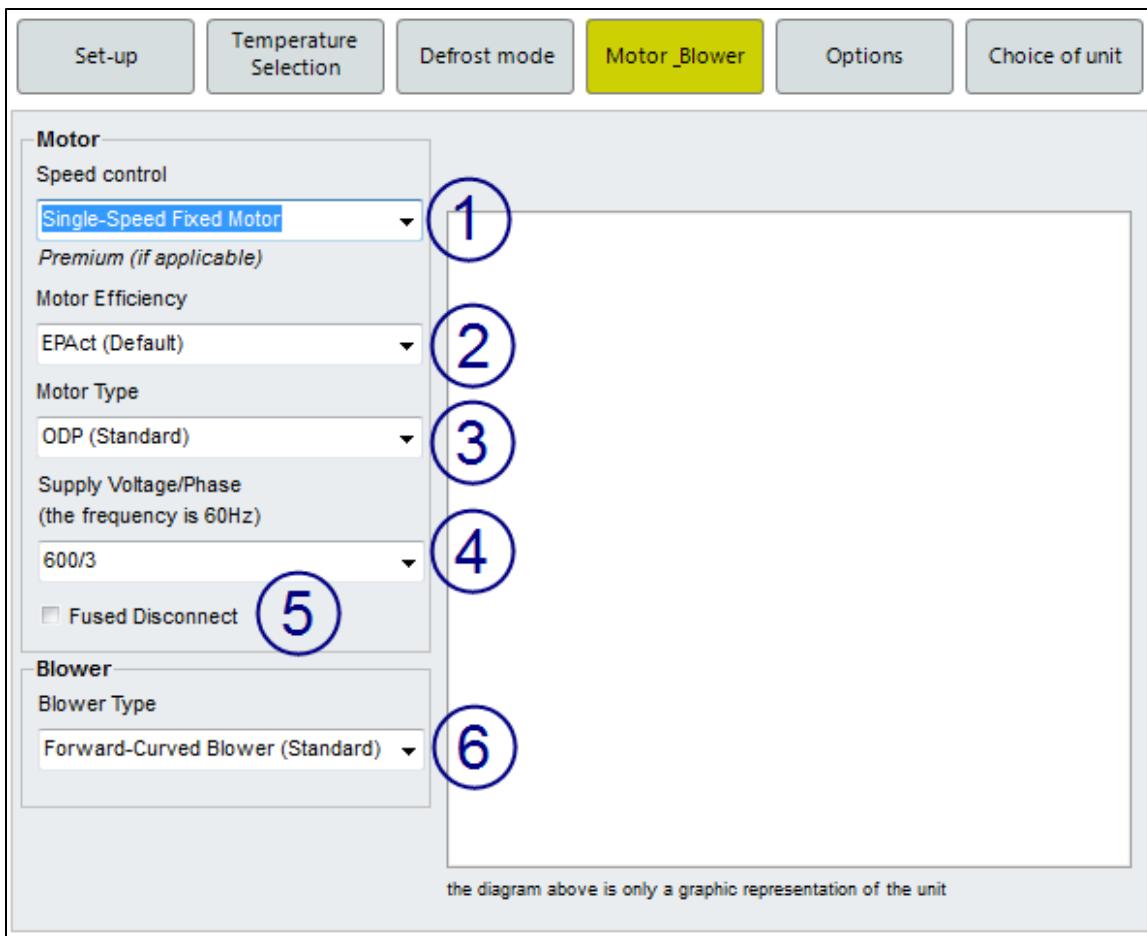

9. The *Motor Speed control* determines how the motor will be controlled. The motor can be controlled in one of the following ways :
 - a. *Single-Speed Fixed Motor* – This is a single-speed motor controlled with a magnetic contactor.
 - b. *Two-Speed Fixed Motor* – This is a two-speed motor with two windings controlled with a magnetic contactor and a mechanical interlock between both windings.
 - c. *VFD Variable Speed (0-10VDC External)* – This is a single-speed motor controlled with a variable frequency drive. The 0-10VDC control signal comes from a source external to the unit.
 - d. *VFD Two-Speed Adjustable with Controller* – This is a single-speed motor controlled with a variable frequency drive and set for a two-speed use.

10. *Motor Efficiency* – This selects the motor efficiency. The motors are Premium efficiency standard when the Premium standard applies.


NOTE: The Graphical User Interface has an error regarding the Motor Efficiency that will be corrected in the next release of the software.

11. *Motor Type* selects the type of motor to be installed in the unit. Motors can be either *ODP* or *TEFC*.
12. *Supply Voltage/Phase* selects the power supply source of the unit. All standard North American voltages are available.


13. *Fused Disconnect* – Check this option if the unit's disconnect needs to be fused. Otherwise, the unit will come with a standard non-fused disconnect.

14. *Blower Type* – The Standard Series is only available with forward-curved, double-width, double-inlet fans.

15. The *Options* tab allows the user to select the desired options to be included in the unit. If an option you need is not available in the provided list, select *Other: Contact Aldes* and a member of the Aldes support team will review the project with you to discuss all available options.

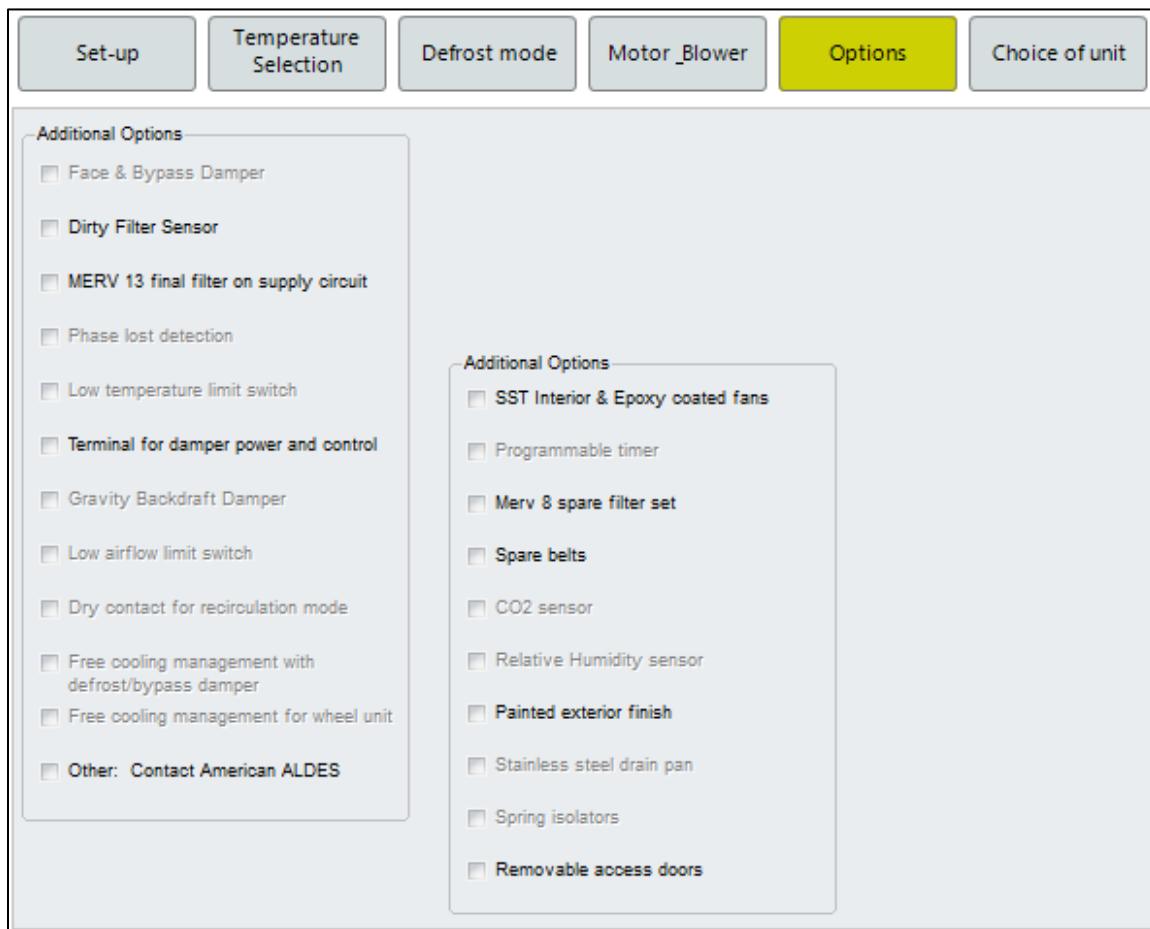

16. *Choice of unit* – Click on the *Calculate* button to evaluate and determine the most appropriate unit based on entered information.

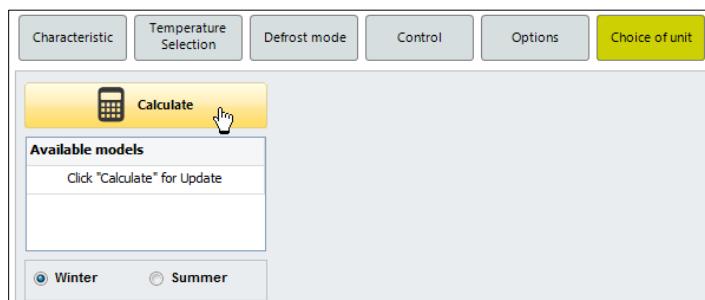

17. If multiple unit models are shown, this is because the entered information falls within the range of multiple models. Select the desired model to display unit information.

Available models
SE1000i


18. To save the unit selection to your project, click *Save*.



19. After a unit has been saved, a brief description will be added to that unit in the project list.



Low-Profile Commercial

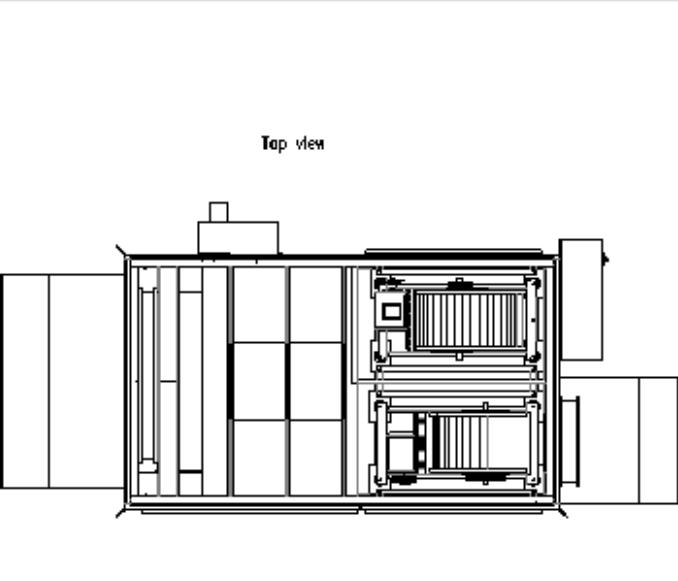Set-up	Temperature Selection	Air treatment	Motor_Blower	Options	Choice of unit
<p>Installation</p> <p>Exterior</p> <p>Hood</p> <p>OA and EA</p> <p>Duct Configuration</p> <p>Config-1 </p> <p>Casing</p> <p>Horizontal Casing</p> <p><input type="checkbox"/> Mirror configuration</p> <p>Supply Motorized Damper</p> <p>Default</p> <p>Exhaust Motorized Damper</p> <p>Default</p> <p>Roof Curb:</p> <p>None</p> <div style="text-align: center;">  <p>Top view</p> <p>the diagram above is only a graphic representation of the unit</p> </div>					

1. Enter unique unit tag #.
2. Select desired recovery type and core choice.

NOTE: Some models are only available with fixed-plate cores. This can be changed at any time during the selection process to see how core selection impacts the unit's performance.


UNIT TAG #	Recovery Type	Core Choice
ERV-1	Fixed Plate	Enthalpic

3. Enter the airflow data.

Fresh Air <input type="text" value="500"/> CFM External Static Pressure - Fresh Air <input type="text" value="0.25"/> in.H2O	Exhaust Air <input type="text" value="530"/> CFM External Static Pressure - Exhaust Air <input type="text" value="0.4"/> in.H2O
---	--

4. The *Set-up* tab shows the configuration and installation options of the unit.
 - a) *Installation* can be either an *Interior* installation (ex: in a mechanical room) or an *Exterior* installation (ex: on a rooftop).

- b) *Hood* applies only to the Exterior installation units. When set to *OA and EA*, unit will be equipped with hoods on the fresh air intake and exhaust air. When set to *None*, the unit will not be equipped with hoods.
- c) *Duct Configuration* – Click the info button  to select the proper duct configuration for the unit. Click **Confirm Change** to select the *Duct Configuration*.

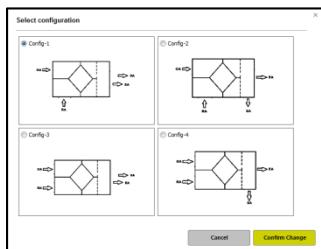

- d) *Casing* can be either a *Horizontal Casing* or a *Vertical Casing*. The *Horizontal Casing* will have the supply air and return air duct positioned at the ends of the unit while the *Vertical Casing* will have them under the unit.

NOTE: The choice in *Casing* shall reflect the choice in *Duct Configuration*.

- e) *Mirror configuration* – when the clearance needs the doors to be on the opposite side of the unit, select the *Mirror configuration* option. The airflows and duct configuration will remain the same, but the doors will be on the opposite side of the unit.
- f) *Supply Motorized Damper* and *Exhaust Motorized Damper*. Select *Default* if you need two-position spring return actuated damper; With *end switch* if you need the dampers' position confirmation; or *None* if you do not need dampers.

NOTE: The *Supply Motorized Damper* is mandatory when the *Frost Control Method* is set to *Exhaust Defrost* (*Frost Control Method* will be covered in the *Defrost Mode* tab)

- g) *Roof Curb* –Select *14" Insulated Roof Curb* if you need an insulated roof curb; *14" Non-Insulated Roof Curb* if you do not need insulation with your roof curb; or *None* if you do not need a roof curb.
- 5. To move between tabs, simply select the desired tab. It is **strongly advised** that the tabs are filled out from left to right to avoid any conflict in entered data or selected options.
- 6. *Temperatures* – Review and make any necessary changes. The default temperatures are based on ASHRAE standard design conditions for the selected city. If no city was selected, the temperatures will be zero.

Winter	
FDB	FWB
Outside Air	38 °F
Indoor Air	70 °F
FDB	FWB
Outside Air	38 °F
Indoor Air	58 °F
Summer	
FDB	FWB
Outside Air	92 °F
Indoor Air	75 °F
FDB	FWB
Outside Air	77 °F
Indoor Air	63 °F
Altitude 228 in	

7. The *Air treatment* tab lets you select the desired *Frost Control Method* and the desired air treatment (*Heating and Cooling Coils*). Given your unit configuration and design temperature, *Selector* will indicate if a *Frost Control Method* is required.



In the Low-Profile Series, the available *Frost Control Methods* are:

- a) *Exhaust Defrost*
- b) *Electric Pre-Heat*
- c) *Recirculation Defrost*
- d) *Liquid Heating Coil* (not fully implemented in this version of *Selector*™)
- e) *None*


NOTE: If no *Frost Control Method* is selected, it is the customer's responsibility to avoid any formation of ice or frost on the core.

TIP: For additional details on a specific option, click the info button .


In the Low-Profile Series you have the option to add post-heating to bring the supply air to the desired temperature before distributing it to the building. The available post-heating options are:

- a) *Electric Heating Coil* – To size the *Electric Heating Coil*, enter the *Desired Supply Air Temperature (Winter)*.
- b) *Liquid Heating Coil* – The *Liquid Heating Coil* will be sized at the *Choice of unit* tab.
- c) *None* – By selecting *None*, no heating will be included in the unit.

NOTE: Under the *Pipe Connection* drop-down menu, you can select the desired location for the drain pan *Pipe Connection*.

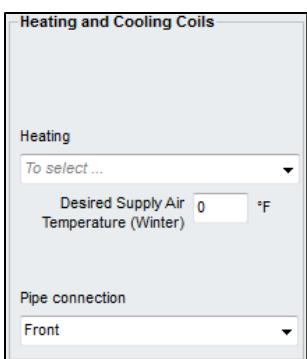

8. The *Motor_Blower* tab shows configuration and control of the motor/fan assembly.

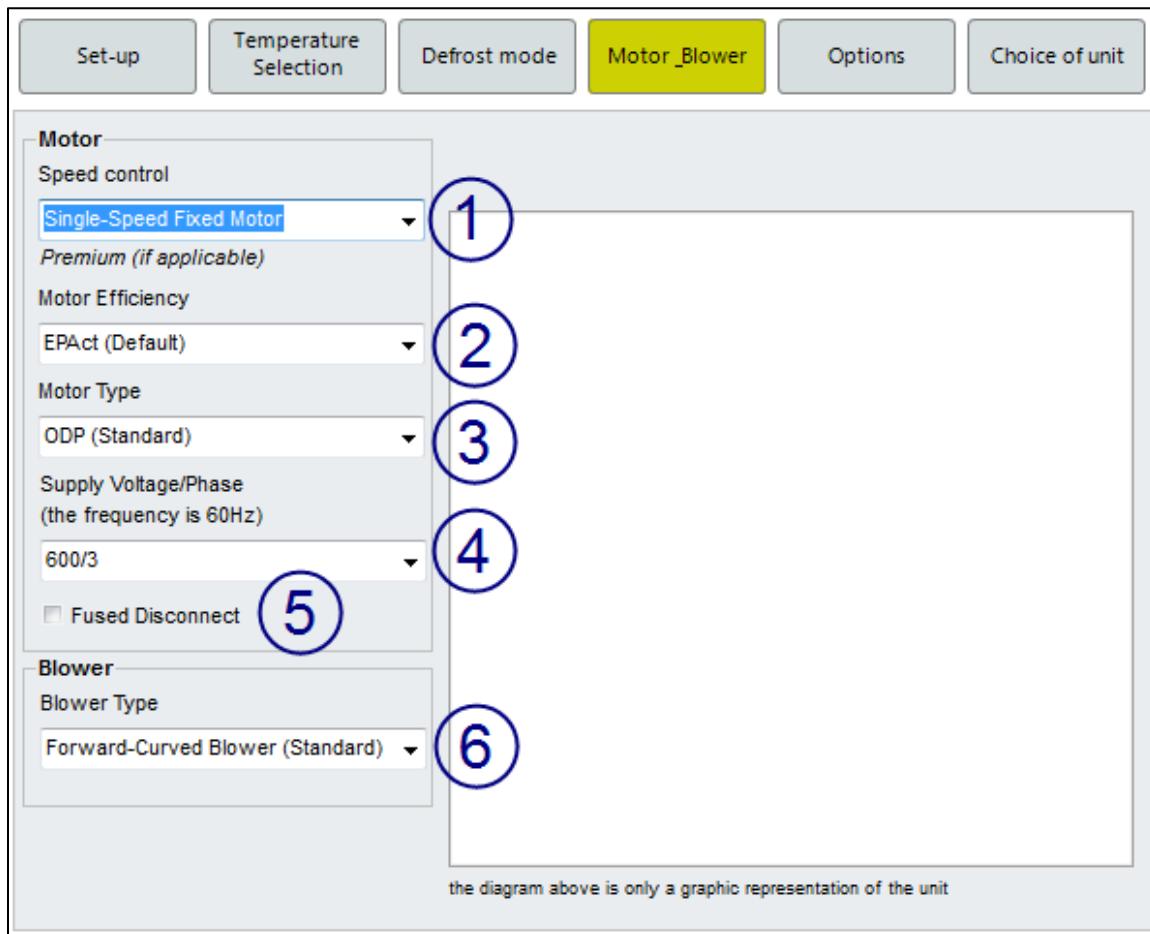


- 1) The *Motor Speed Control* determines how the motor will be controlled. The motor can be controlled in one of the following ways:
 - a. *Single-Speed Fixed Motor* – This is a single-speed motor controlled with a magnetic contactor.
 - b. *Two-Speed Fixed Motor* – This is a two-speed motor with two windings controlled with a magnetic contactor and a mechanical interlock between both windings.
 - c. *VFD Variable Speed (0-10VDC External)* – This is a single-speed motor controlled with a variable frequency drive. The 0-10VDC control signal comes from a source external to the unit.
 - d. *VFD Two-Speed Adjustable with Controller* – This is a single-speed motor controlled with a variable frequency drive and set for two-speed use.
- 2) *Motor Efficiency* – This selects the motor efficiency. The motors are Premium efficiency standard when the Premium standard applies.

NOTE: The Graphical User Interface has an error regarding the Motor Efficiency that will be corrected in the next release of the software.

- 3) *Motor Type* selects the type of motor to be installed in the unit. Motors can be either *ODP* or *TEFC*.
- 4) *Supply Voltage/Phase* selects the power supply source of the unit. All standard North American voltages are available.

- 5) *Fused Disconnect* – Check this option if the unit's disconnect needs to be fused. Otherwise, the unit will come with a standard non-fused disconnect.
- 6) *Blower Type* – The Standard Series is only available with forward-curved, double-width, double-inlet fans.
9. The *Options* tab lets you choose the desired option to be included in the unit.
- If an option you need is not available in the proposed list, select *Other: Contact Aldes* and support staff will review the project with you to discuss your options.
 - You can select a *Compatible BACnet Controller* to control the unit and add a communication port or interface.
 - Under the *Unit Control* drop-down menu, you can select the communication port of the controller.
 - It can be either *Internet (IP)* or *Ethernet (MS/TP)* or *None*. The latter will not have BACnet communication installed but could be upgraded later.
 - Under the *Wall controller* drop-down menu, you can select an interface for the controller. It can be either the *Default* wall controller with buttons; a wall controller *With touch screen*; or *None*.


10. *Choice of unit* – Click on the *Calculate* button to evaluate and determine the most appropriate unit based on entered information.

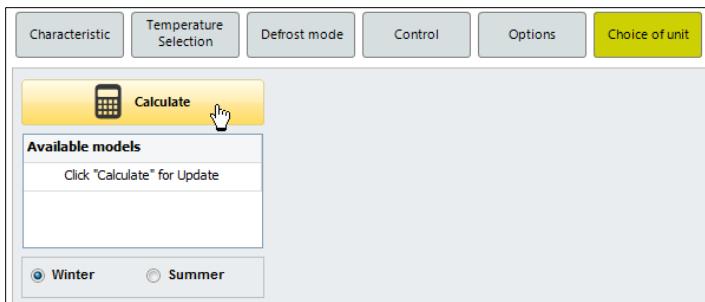

11. If multiple unit models are shown, this is because the entered information falls within the range of these models. Select the desired model to display unit information.



12. If you selected a Liquid Heating coil, you will have to select and size your coil by clicking the define button and entering your liquid parameters.

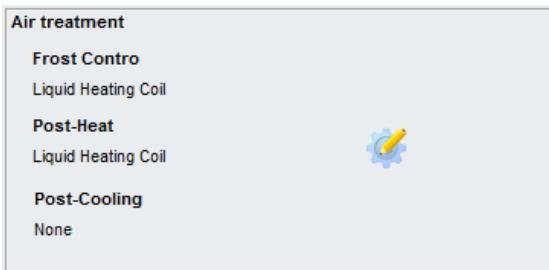

To size the coil, fill the necessary information and iterate the coil's geometry until a satisfactory result is achieved. See the [**Liquid Coil Selection**](#) section for more details on coil selection.

Coil selection

Batterie type: Hot Water Coil

General information		Options	
Tube diameter (OD)	5/8 1.50 x 1.299	Tube wall thickness	0.018 Plain
Rows deep	2	Fin material	Aluminium 0.006
Number of circuits	12	Casing material	Galvanized Steel 12 gauge
Fins per inch	10	Connection type	MPT Red Brass
		Connection size	Calculate
		Coil coating	Plain
Fluid data		General coil data	
Glycol type	Propylene glycol	Handing	Right
Glycol ratio	10	Casing style	Standard
Entering fluid temp	180 °F		
Leaving fluid temp	160 °F		
Fluid flow rate (total)	0 GPM		
Max. fluid pressure drop	20 in.H2O		
Refrigerant	R22		
Refrigerant evaporating temperature	0 °F		
Refrigerant liquid temperature	0 °F		
Superheat	0 °F		

Calculate

✓ Coil available
Leaving air temperature = 100.7 °F
Pressure drop = 0.58 in/H2O

Cancel **Confirm Change**

Click **Confirm Change** to Select the coil.


13. To save the unit selection to your project, click **Save**.



14. After a unit has been saved, a brief description will be added to that unit in the project list.



Advanced Commercial

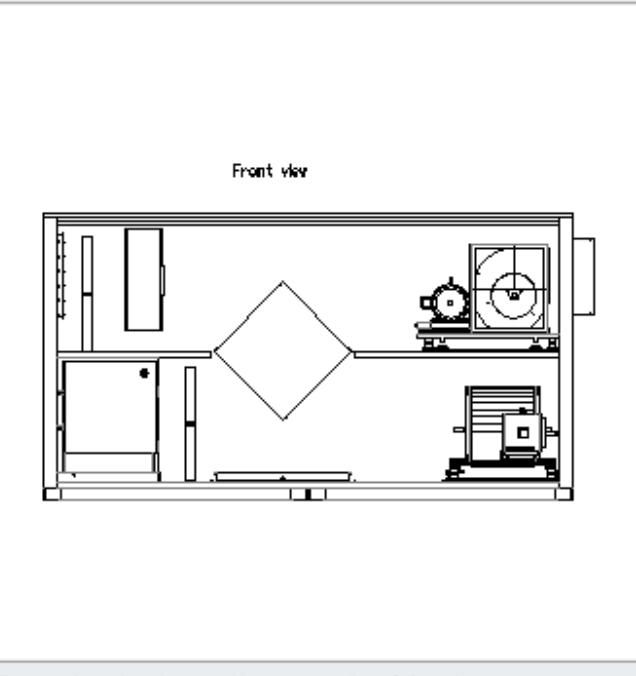Set-up	Temperature Selection	Air treatment	Motor_Blower	Options	Choice of unit
<p>Installation</p> <p>Interior</p> <p>Hood</p> <p>None</p> <p>Duct Configuration</p> <p>Config-1 </p> <p>Casing</p> <p>Horizontal Casing</p> <p><input type="checkbox"/> Mirror configuration</p> <p>Supply Motorized Damper</p> <p>Default</p> <p>Exhaust Motorized Damper</p> <p>Default</p> <p>Roof Curb:</p> <p>None</p>  <p>the diagram above is only a graphic representation of the unit</p>					

1. Enter unique unit tag #.
2. Select desired recovery type and core choice.

NOTE: Some models are only available with fixed-plate cores. This can be changed at any time during the selection process to see how core selection impacts the unit's performance.


UNIT TAG #	Recovery Type	Core Choice
ERV-1	Fixed Plate	Enthalpic

3. Enter the required airflow data.

Fresh Air <input type="text" value="500"/> CFM	Exhaust Air <input type="text" value="530"/> CFM
External Static Pressure - Fresh Air <input type="text" value="0.25"/> in.H2O	External Static Pressure - Exhaust Air <input type="text" value="0.4"/> in.H2O

4. The Set-up tab shows the configuration and installation options of the unit.
 - a) *Installation* can be either an *Interior* installation (Ex: in a mechanical room) or an *Exterior* installation Ex: on a rooftop).

- b) *Hood* applies only to the Exterior installation units. When set to *OA and EA*, unit will be equipped with hoods on the fresh air intake and exhaust air. When set to *None*, the unit will not be equipped with hoods.
- c) *Duct Configuration* – Click the info button  to select the proper duct configuration for the unit. Click **Confirm Change** to select the *Duct Configuration*.

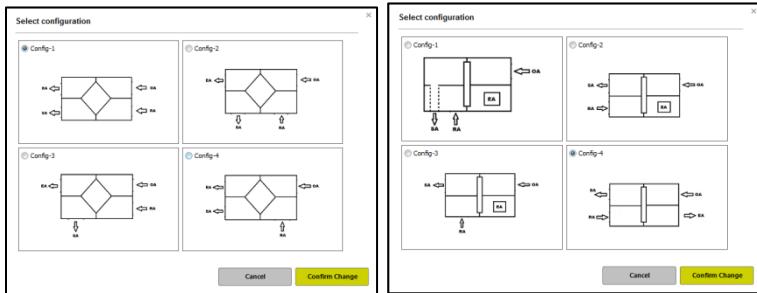

- d) *Casing* can be either a *Horizontal Casing* or a *Vertical Casing*. The *Horizontal Casing* will have the supply air and return air ducts positioned at the ends of the unit, while the *Vertical Casing* will have them under the unit.

NOTE: The choice in *Casing* shall reflect the choice in *Duct Configuration*.

- e) *Mirror configuration* – When the clearance needs the doors to be on the opposite side of the unit, select the *Mirror configuration* option. The airflows and duct configuration will remain the same, but the doors will be on the opposite side of the unit.
- f) *Supply Motorized Damper and Exhaust Motorized Damper* – Select *Default* if you need two-position, spring return actuated dampers; *With end switch* if you need the dampers' position confirmation; or *None* if you do not need dampers.

NOTE: The *Supply Motorized Damper* is mandatory when the *Frost Control Method* is set to *Exhaust Defrost* (*Frost Control Method* will be covered in the *Defrost Mode* tab)

- g) *Roof Curb* – Select *14" Insulated Roof Curb* if you need an insulated roof curb; *14" Non-Insulated Roof Curb* if you do not need insulation with your roof curb; or *None* if you do not need a roof curb.
- 5. To move between tabs, simply select the desired tab. It is **strongly advised** that the tabs are filled out from left to right to avoid any conflict in entered data or selected options.
- 6. *Temperatures* – Review and make any necessary changes. The default temperatures are based on ASHRAE standard design conditions for the selected city. If no city was selected, the temperatures will be zero.

Winter	
FDB	FWB
Outside Air <input type="text" value="38"/>	°F <input type="text" value="38"/>
Indoor Air <input type="text" value="70"/>	°F <input type="text" value="58"/>
Summer	
FDB	FWB
Outside Air <input type="text" value="92"/>	°F <input type="text" value="77"/>
Indoor Air <input type="text" value="75"/>	°F <input type="text" value="63"/>
Altitude <input type="text" value="228"/> in	

7. Air treatment tab lets you select the desired *Frost Control Method* and the desired air treatment (*Heating and Cooling Coils*). Given your unit configuration and design temperature, *Selector™* will indicate if a *Frost Control Method* is required.




In the Advanced Commercial Series, the available *Frost Control Methods* are:

- a) *Exhaust Defrost*
- b) *Electric Pre-Heat*
- c) *Recirculation Defrost*
- d) *Face & Bypass Damper* (only available with fixed-plate recovery core)
- e) *Variable Wheel Speed* (only available with Enthalpy wheel)
- f) *Liquid Heating Coil* (not fully implemented in this version)
- g) *None*

NOTE: If no *Frost Control Method* is selected, it is the customer's responsibility to avoid any formation of ice or frost on the core.

TIP: For additional details on a specific option, click the info button .

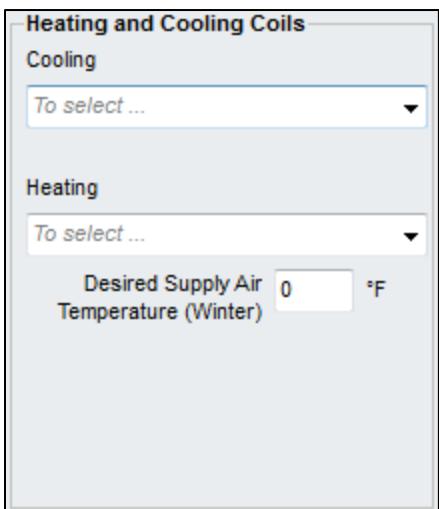


In the Advanced Commercial Series you have the option to add post-heating and post-cooling to bring the supply air to the desired temperature before distributing it to the building. The available heating and cooling options are:

- a) *Electric Heating Coil* – To size the *Electric Heating Coil*, enter the *Desired Supply Air Temperature (Winter)*.
- b) *Liquid Heating Coil* – The *Liquid Heating Coil* will be sized at the *Choice of unit* tab.

- c) *Liquid Cooling Coil* – The *Liquid Cooling Coil* will be sized at the *Choice of unit* tab.
- d) *DX Cooling Coil* – The *Liquid DX Coil* will be sized at the *Choice of unit* tab.
- e) *None* – By selecting *None*, no heating nor cooling will be included in the unit.

NOTE: Under the *Pipe Connection* drop-down menu, only available with fixed-plate core and cooling coil, you can select the desired location for the drain pan *Pipe Connection*.

8. The Motor_Blower tab shows configuration and control of the motor/fan assembly.

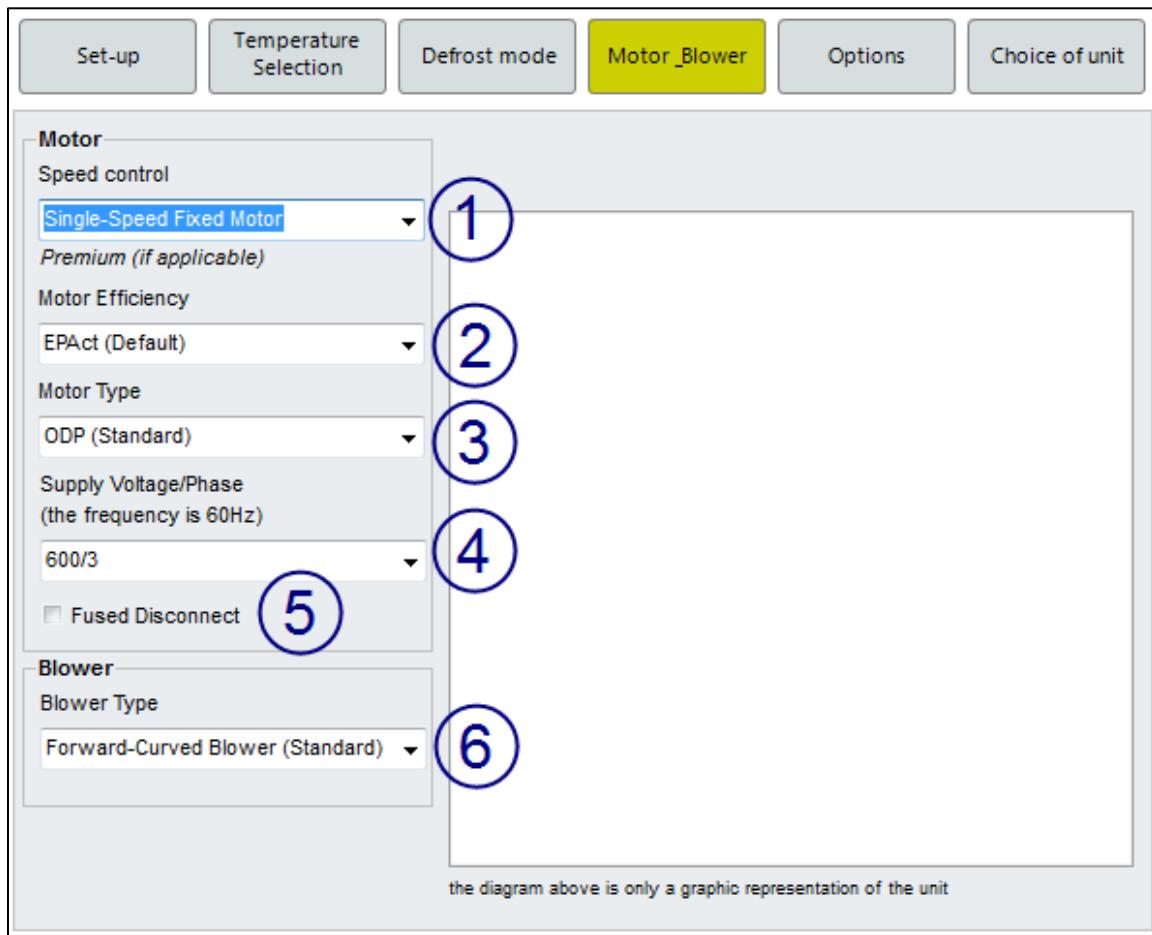

- 1) The *Motor Speed control* determines how the motor will be controlled. The motor can be controlled in one of the following ways:
 - a. *Single-Speed Fixed Motor* – This is a single-speed motor controlled with a magnetic contactor.
 - b. *Two-Speed Fixed Motor* – This is a two-speed motor with two windings controlled with a magnetic contactor and a mechanical interlock between both windings.
 - c. *VFD Variable Speed (0-10VDC External)* – This is a single-speed motor controlled with a variable frequency drive. The 0-10VDC control signal comes from a source external to the unit.
 - d. *VFD Two-Speed Adjustable with Controller* – This is a single-speed motor controlled with a variable frequency drive and set for two-speed use.

- 2) *Motor Efficiency* – This selects the motor efficiency. The motors are Premium efficiency standard when the Premium standard applies.

NOTE: The Graphical User Interface has an error regarding the Motor Efficiency that will be corrected in the next release of the software.

- 3) *Motor Type* selects the type of motor to be installed in the unit. Motors can be either *ODP* or *TEFC*.
 - 4) *Supply Voltage/Phase* selects the power supply source of the unit. All standard North American voltages are available.
 - 5) *Fused Disconnect*. Check this option if the unit's disconnect needs to be fused. Otherwise, the unit will come with a standard non-fused disconnect.
 - 6) *Blower Type* is to select the blower type. The *Forward-Curved Blower* is available for the Advanced Commercial Series and consists of a forward-curved, double-width, double-inlet fan.
9. The *Options* tab lets you choose the desired options to be included in the unit.
- a) If an option you need is not available in the proposed list, select *Other: Contact Aldes* and support staff will review the project with you to discuss your options.
 - b) You can select a *Compatible BACnet Controller* to control the unit and add a communication port or interface.
 - i. Under the *Unit Control* drop menu, you can select the communication port of the controller.
 - ii. It can be either *Internet (IP)* or *Ethernet (MS/TP)* or *None*. The latter will not have BACnet communication installed but could be upgraded later.
 - iii. Under the *Wall controller* drop menu, you can select an interface for the controller. It can be either the *Default* wall controller with buttons; a wall controller *With touch screen*; or *None*.

Set-up	Temperature Selection	Air treatment	Motor_Blower	Options	Choice of unit				
<p>Additional Options</p> <p><input type="checkbox"/> Face & Bypass Damper</p> <p><input type="checkbox"/> Dirty Filter Sensor</p> <p><input type="checkbox"/> MERV 13 final filter on supply circuit</p> <p><input type="checkbox"/> Phase lost detection</p> <p><input type="checkbox"/> Low temperature limit switch</p> <p><input type="checkbox"/> Terminal for damper power and control</p> <p><input type="checkbox"/> Gravity Backdraft Damper</p> <p><input type="checkbox"/> Low airflow limit switch</p> <p><input type="checkbox"/> Dry contact for recirculation mode</p> <p><input type="checkbox"/> Free cooling management with defrost/bypass damper</p> <p><input type="checkbox"/> Free cooling management for wheel unit</p> <p><input type="checkbox"/> Other: Contact American ALDES</p>									
<p><input checked="" type="checkbox"/> Compatible Bacnet controller</p> <p>Unit control</p> <table border="1"> <tr> <td>None (Default)</td> <td>Wall controller</td> </tr> <tr> <td><input type="button" value="None"/></td> <td><input type="button" value="None"/></td> </tr> </table> <p>Additional Options</p> <p><input type="checkbox"/> SST Interior & Epoxy coated fans</p> <p><input type="checkbox"/> Programmable timer</p> <p><input type="checkbox"/> Merv 8 spare filter set</p> <p><input type="checkbox"/> Spare belts</p> <p><input type="checkbox"/> CO2 sensor</p> <p><input type="checkbox"/> Relative Humidity sensor</p> <p><input type="checkbox"/> Painted exterior finish</p> <p><input type="checkbox"/> Stainless steel drain pan</p> <p><input type="checkbox"/> Spring isolators</p> <p><input type="checkbox"/> Removable access doors</p>						None (Default)	Wall controller	<input type="button" value="None"/>	<input type="button" value="None"/>
None (Default)	Wall controller								
<input type="button" value="None"/>	<input type="button" value="None"/>								

10. *Choice of unit* – Click on the *Calculate* button to evaluate and determine the most appropriate unit based on entered information.

Characteristic	Temperature Selection	Defrost mode	Control	Options	Choice of unit
<p> <input type="button" value="Calculate"/></p> <p>Available models</p> <p>Click "Calculate" for Update</p> <p><input checked="" type="radio"/> Winter <input type="radio"/> Summer</p>					

15. If multiple unit models are shown, this is because the entered information falls within the range of these models. Select the desired model to display unit information.

 <input type="button" value="Calculate"/>
Available models
CW2000i
CW3000i



16. If you selected a Liquid Heating coil, you will have to select and size your coil by clicking the define button and entering your liquid parameters.

Air treatment

Frost Control

Liquid Heating Coil

Post-Heat

Liquid Heating Coil

Post-Cooling

None

To size the coil, fill the necessary information and iterate the coil's geometry until a satisfactory result is achieved. See [Liquid Coil Selection](#) section for more details on coil selection.

Coil selection

Batterie type: Hot Water Coil

General information

Tube diameter (OD): 5/8 1.50 x 1.299

Rows deep: 2

Number of circuits: 12

Fins per inch: 10

Fluid data

Glycol type: Propylene glycol

Glycol ratio: 10

Entering fluid temp: 180 °F

Leaving fluid temp: 160 °F

Fluid flow rate (total): 0 GPM

Max. fluid pressure drop: 20 in.H2O

Refrigerant: R22

Refrigerant evaporating temperature: 0 °F

Refrigerant liquid temperature: 0 °F

Superheat: 0 °F

Options

Tube wall thickness: 0.018 Plain

Fin material: Aluminum 0.006

Casing material: Galvanized Steel 12 gauge

Connection type: MPT Red Brass

Connection size: Calculate

Coil coating: Plain

General coil data

Handing: Right

Casing style: Standard

Calculate

✓ Coil available
Leaving air temperature = 100.7 °F
Pressure drop = 0.58 in/H2O

Cancel Confirm Change

Click **Confirm Change** to select the *Select the coil*.

17. To save the unit selection to your project, click *Save*.



18. After a unit has been saved, a brief description will be added to that unit in the project list.

Example Project Details

ERV-1 LE3000i

Fresh Air 2250 CFM - 1 in...

Exhaust 2250 CFM - 1 in...

Copy a Unit Selection

Many projects feature multiple units with identical, or very similar, selections. To expedite the process of creating a project with similar units, a selection can be duplicated after it has been saved.


1. Click on the unit to be copied. Selected units are highlighted.



2. To copy, press CTRL+C. Then press CTRL+V to paste. A duplicate unit will be created in the project list.



3. Select the copied unit, and update any information unique to this new unit, such as the unit tag number.

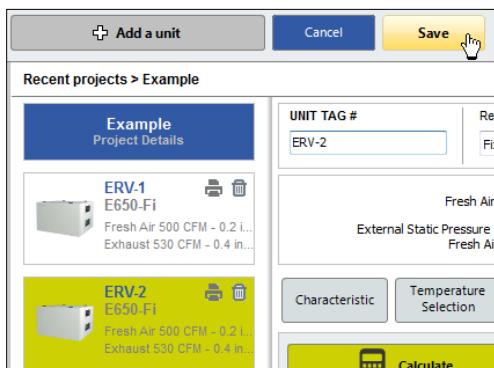


Delete a Unit Selection

If, during the selection process, a unit needs to be removed from the project list, it can be easily deleted.

1. To delete a single unit from a project, click the trashcan icon for that unit.




2. Confirm the deletion of the unit.

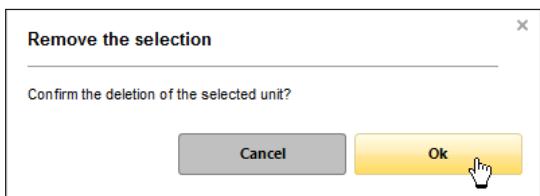

Print Project Details

1. Click the print icon  on the main home page or at the top right of the software. This will prompt the print options page.


TIP: You can return to the project details page at any time during the selection process by clicking on the *Project Details* button.

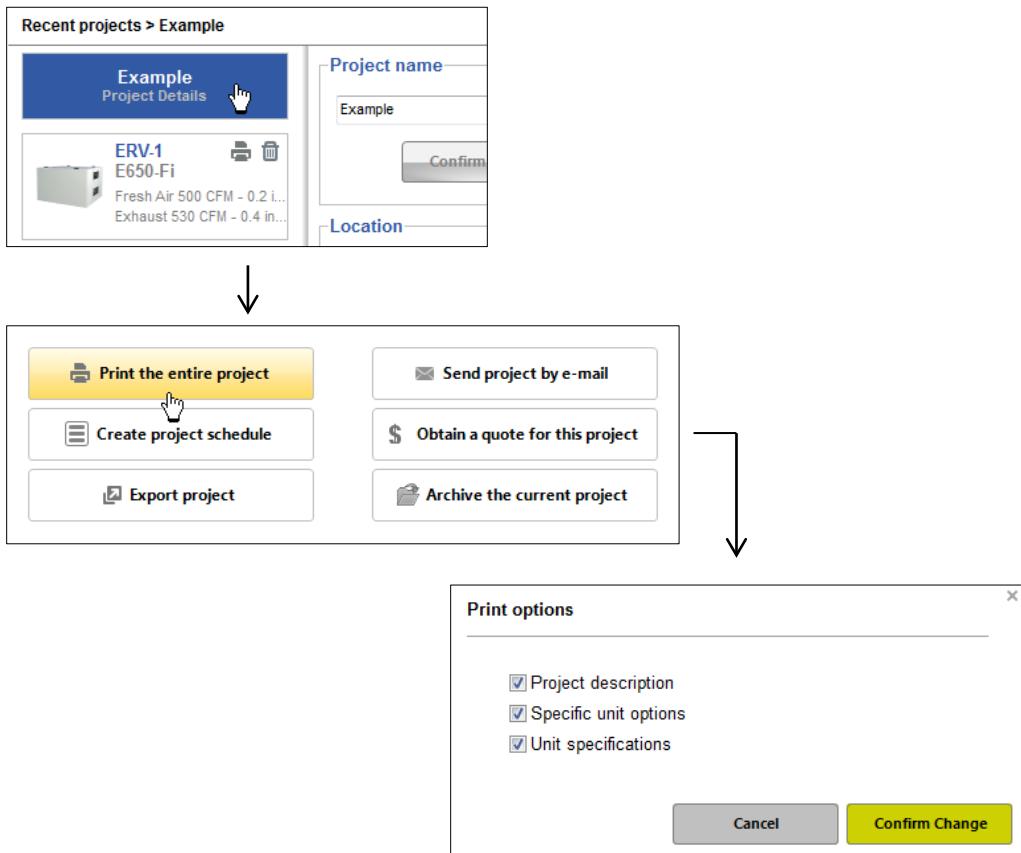

2. *Project description* will print the project details, i.e., information that is entered on the project details page and a brief description of the unit selection(s).
3. *Specific unit options* will print a detailed submittal with entered conditions, performance and selected options.
4. *Unit specifications* will print the generic unit specs for all models in the project selection.
5. Click *Confirm Change* to create a PDF file with the selected options.

Print Individual Unit Details

1. Click the print icon  on the unit you want to print details for. This will prompt the print options page.

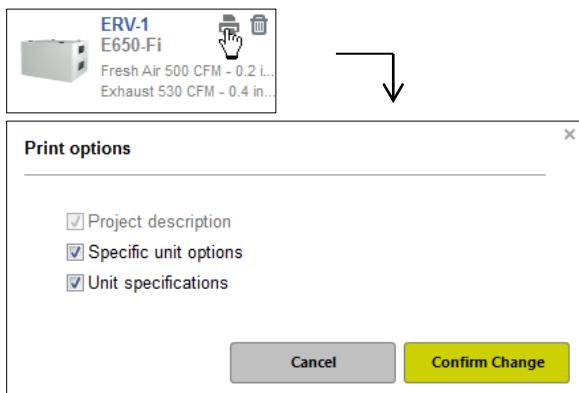


2. Notice the *Project description* option is not available. To print project details, i.e., information that is entered on the project details page and a brief description of the unit selection(s), click on the print icon at either the top right corner of the software or the project details page. See [Print Project Details](#) for additional information.
3. *Specific unit options* will print a detailed submittal with entered conditions, performance and selected options.
4. *Unit specifications* will print the generic unit specs for all models in the project selection.
5. Click *Confirm Change* to create a PDF file with the selected options.

Create a Unit Schedule


Selector™ has the ability to generate project schedules showing all critical performance data for each unit selection.

1. To create a schedule, return to the project details page.

TIP: You can return to the project details page at any time during the selection process by clicking on the *Project Details* button.

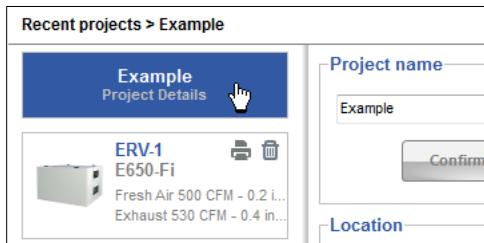


2. Click on the **Create project schedule** button to create an editable Excel spreadsheet with all project information.

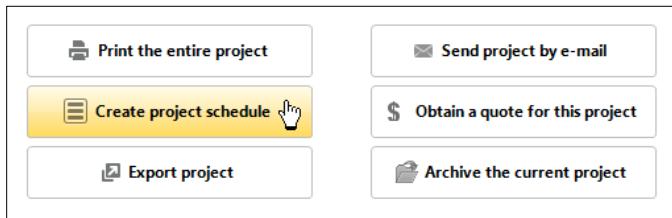


Import a Project

When a project is created, it can easily be shared by sending the project file via e-mail. Projects that are received must be imported in order to be viewed.


1. To import a project, click on the *Imported projects* folder in the projects list.

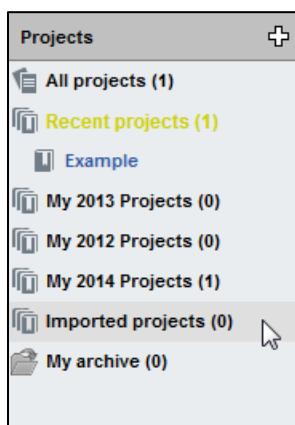

2. Click on the **Import project** button to add a received file to your project list.

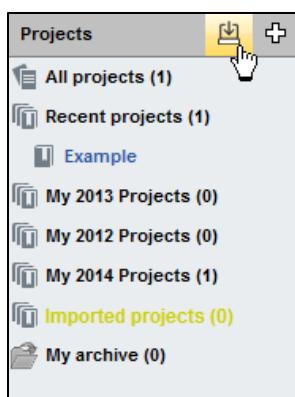

3. Locate the file on your computer and click **Open**. The project will automatically load.

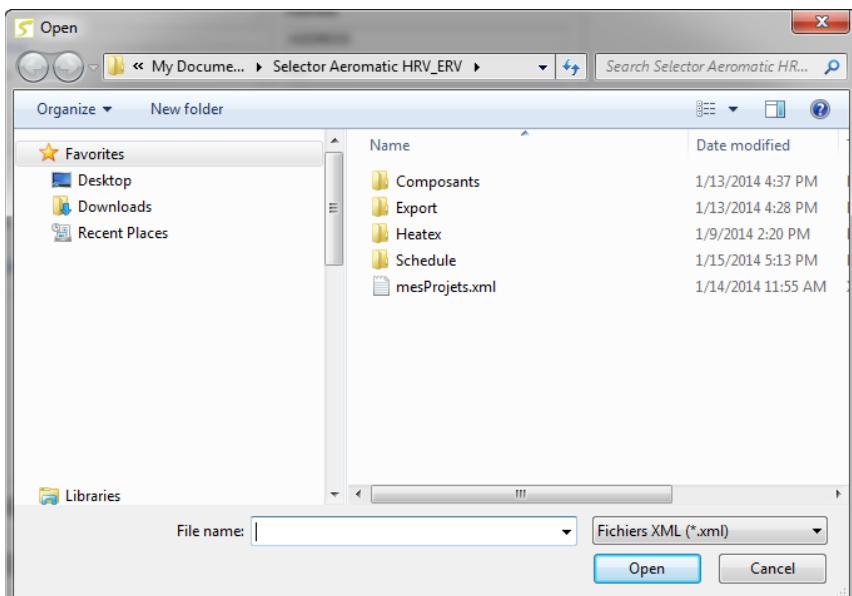

Liquid Coil Selection

The purpose of this section is to explain to you what the procedure is for optimizing a coil selection, in terms of cost and performance. There are many factors to consider, and Aldes is more than happy to do this process for you. If you send us the selection and your coil requirements, we will review and finalize the coil selection and send the completed unit selection back to you so that the schedule, submittal, and unit performance are accurate. If you want to complete the selection yourself, please follow the instructions below.


This section will help you to properly size a hydronic coil. The most important thing to remember is that **the coil geometry must meet the following criteria:**

$$\frac{\text{Number of Tubes} * \text{Number of Rows}}{\text{Number of Circuit}} = \text{Positive, Even Number}$$


The *Number of Tubes* represents the number of copper tubes in which the fluid circulates in one full row. Depending on the height of the coil, the number of tubes will vary. Likewise, the higher the coil, the more tubes there will be. At the end of this section, there is a table that references the number of tubes for every unit.

The *Number of Rows* represents the columns of tubes the air will have to cross before it leaves the coils. The more rows there are, the thicker the coil will be.

The *Number of Circuit* represents the number of tubes in the first row that are connected directly into the supply manifold. Usually, the number of circuit is one of the higher factors of the number of tubes. Example, if a coil has 12 tubes, its factors are 1, 2, 3, 4, 6 and 12. Usually, a 12-tubes coil will have 12, 6 or 4 circuits. Please refer to the following picture:

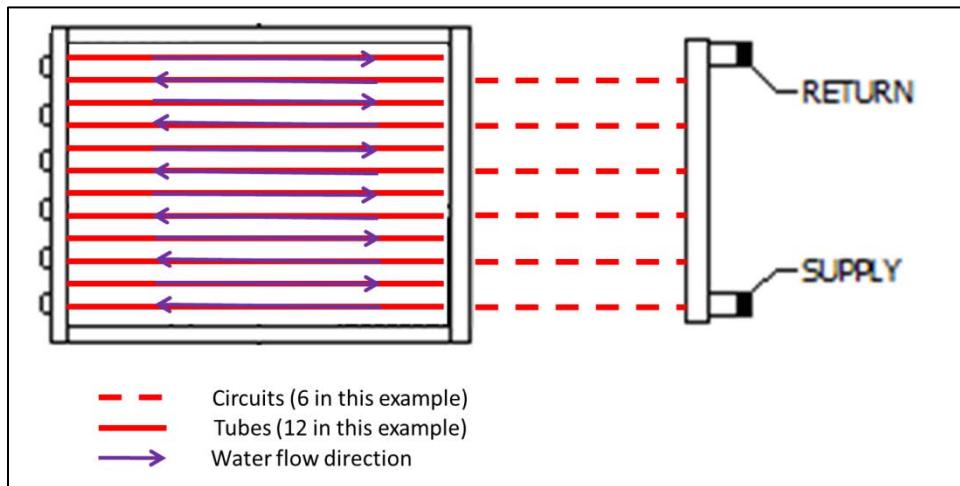

1. To size the Liquid Coil, under the *Choice of Unit* tab, click the define button . It will display the Coil Selection form where you will be able to enter your data and properly size the coil.

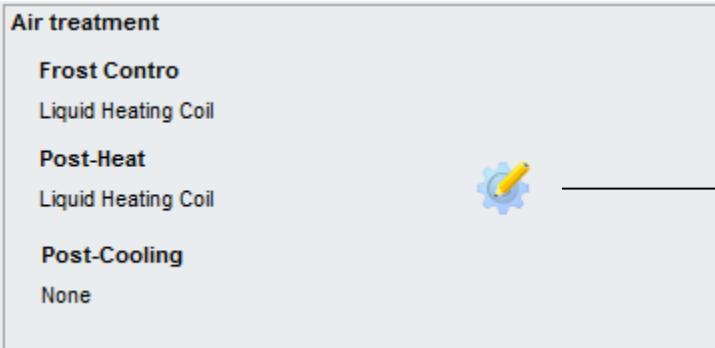

Coil selection

Batterie type: Hot Water Coil

General information		Options	
Tube diameter (OD)	5/8 1.50 x 1.299	Tube wall thickness	0.018 Plain
Rows deep	2	Fin material	Aluminium 0.006
Number of circuits	12	Casing material	Galvanized Steel 12 gauge
Fins per inch	10	Connection type	MPT Red Brass
		Connection size	Calculate
		Coil coating	Plain
Fluid data			
Glycol type	Propylene glycol	General coil data	
Glycol ratio	10	Handing	Right
Entering fluid temp	180 °F	Casing style	Standard
Leaving fluid temp	160 °F	Calculate	
Fluid flow rate (total)	0 GPM		
Max. fluid pressure drop	20 in.H2O		
Refrigerant	R22		
Refrigerant evaporating temperature	0 °F	✓ Coil available	
Refrigerant liquid temperature	0 °F	Leaving air temperature = 100.7 °F	
Superheat	0 °F	Pressure drop = 0.58 in/H2O	

Cancel **Confirm Change**

2. In the *Fluid data* frame, enter your fluid data.

- a) *Glycol type* is the fluid type to be used in the coil. For water coil, the fluid can be *Propylene glycol*, *Ethylene glycol* or *None* (water).

NOTE: If the coil could be exposed to temperature lower than the freezing point, a glycol mixture should be used.

- b) *Glycol ratio* is the percentage of glycol in the fluid, if any glycol is used. Glycol content usually varies between 10-50% and depends on the outside air design temperature.
- c) *Entering fluid temp* is the temperature of the supply water entering the coil. It generally corresponds to the boiler's/chiller's leaving temperature.
- d) *Leaving fluid temp* is the temperature of the return water leaving the coil. It generally corresponds to the boiler's/chiller's entering temperature.

3. In order to obtain the desired Leaving Air Temperature, you will need to iterate the coil's geometry until the desired output is obtained. The coil's geometry is defined by its Number of rows, its Number of Fins per inch and its Number of circuit. By varying these, you will be able to influence the coil's output and obtain the desired Leaving air temperature:
 - a) Select a number of rows by varying the *Rows deep* parameter, between 1 and 6 rows. The more rows you add, the more capacity the coil will have.
 - b) Select a number of *Fins per inch*, between 8 and 12 fins per inch. The more fins per inch you select, the more capacity the coil will have.
 - c) Enter the *Number of circuit*. Always try to use one of the *number of tubes* factors for an easier selection. Start with the highest factor and reduce it or add a row to increase coil's output. At the end of this section is a table that references the number of tubes for every unit.
 - d) Click Calculate and verify the Leaving air temperature. If the Leaving air temperature is not close enough to the desired value, restart at step a) until you reach a satisfactory result.

TIP: Before you add a row, try to increase the Fins per inch or cut the Number of circuit in half (if possible). It will minimize the air pressure drop and keep the cost down.

TIP: If the number of tube is uneven, for example 13, use the same number of circuits as the number of tubes and use an even number of rows.

4. For each coil's geometry iteration, validate the coil selection using:

$$\frac{\text{Number of Tubes} * \text{Number of Rows}}{\text{Number of Circuit}} = \text{Positive Even Number}$$

Number of Tubes = Number found in the table at the end of this section

Numbers of Rows = Varies with your selection

Number of Circuit = Varies with your selection.

Example, a CH2000:

$$\frac{13 \text{ (found in the table)} * 2 \text{ (coil's geometry iteration)}}{13 \text{ (highest factor)}} = 2 = \text{good selection}$$

$$\frac{13 \text{ (found in the table)} * 1 \text{ (coil's geometry iteration)}}{13 \text{ (highest factor)}} = 1 = \text{bad selection}$$

Another example, a CH8000:

$$\frac{22 \text{ (found in the table)} * 1 \text{ (coil's geometry iteration)}}{11 \text{ (factor)}} = 2 = \text{good selection}$$

$$\frac{22 \text{ (found in the table)} * 3 \text{ (coil's geometry iteration)}}{11 \text{ (highest factor)}} = 6 = \text{good selection}$$

$$\frac{22 \text{ (found in the table)} * 3 \text{ (coil's geometry iteration)}}{22 \text{ (highest factor)}} = 3 = \text{bad selection}$$

TIP: Many coils have the same number of circuit as the number of tubes. Simply keep an even number of rows and the verification formula will be met.

Reference Chart: Number of Tubes for Each Unit (Factors)

Model	Liquid Heating Coil	Liquid Cooling Coil	DX Cooling coil
CH2000/CE2000	13 (1, 13)	13 (1, 13)	15 (1, 3, 5, 15)
CH3000/CE3000	13 (1, 13)	13 (1, 13)	15 (1, 3, 5, 15)
CH5000/CE5000	17 (1, 17)	17 (1, 17)	20 (1, 2, 4, 5, 10, 20)
CH6500/CE6500	17 (1, 17)	17 (1, 17)	20 (1, 2, 4, 5, 10, 20)
CH8000/CE8000	22 (1, 2, 11, 22)	22 (1, 2, 11, 22)	26 (1, 2, 13, 26)
CH10000/CE10000	22 (1, 2, 11, 22)	22 (1, 2, 11, 22)	26 (1, 2, 13, 26)
CW2000	13 (1, 13)	13 (1, 13)	15 (1, 3, 5, 15)
CW3000	13 (1, 13)	13 (1, 13)	15 (1, 3, 5, 15)
CW5000	17 (1, 17)	17 (1, 17)	20 (1, 2, 4, 5, 10, 20)
CW6500	17 (1, 17)	17 (1, 17)	20 (1, 2, 4, 5, 10, 20)
CW8000	22 (1, 2, 11, 22)	22 (1, 2, 11, 22)	26 (1, 2, 13, 26)
CW10000	22 (1, 2, 11, 22)	22 (1, 2, 11, 22)	26 (1, 2, 13, 26)
LH2000/LE2000	10 (1, 2, 5, 10)	N/A	N/A
LH3000/LE3000	12 (1, 2, 3, 4, 6, 12)	N/A	N/A
LW1500	20 (1, 2, 4, 5, 10, 20)	N/A	N/A
LW3000	26 (1, 2, 13, 26)	N/A	N/A

Error Messages

Selector™ is designed to recognize potential issues with the selection and display error messages. Below are some examples of the messages produced, and what they mean to you.

When *Selector™* detects a value that is outside the published range for the equipment, the error message

Please contact your local distributor to verify the unit selection

will be displayed in the upper-right corner. In these instances, please export the file and send it to your local distributor so that the selection can be reviewed. If the selection can be provided, but the software does not support the selection, you will receive a custom unit submittal with all the unit details.

Similarly, when the external static pressure and/or internal pressure loss is too high, an error message will be displayed by the motor selection in the *Results* tab, as shown below.

Unavailable engines	Supply	Exhaust
Motor_Blower	(0.00 Hp)	3 Hp (2.08 Hp)
Rpm	0	1331
PDC Internal	3.09 in.H2O	1.56 in.H2O

In these cases, you may need to revise the selection by changing models or options. Different models have different motor/blower options, and we may be able to achieve the necessary performance by changing model series. For assistance, please contact your local distributor.