


# AIRFLOW & ZONE CONTROLS Backdraft Dampers Spring-Loaded Backdraft Dampers

INSTALLATION
OPERATION
MAINTENANCE

# READ AND SAVE THESE INSTRUCTIONS

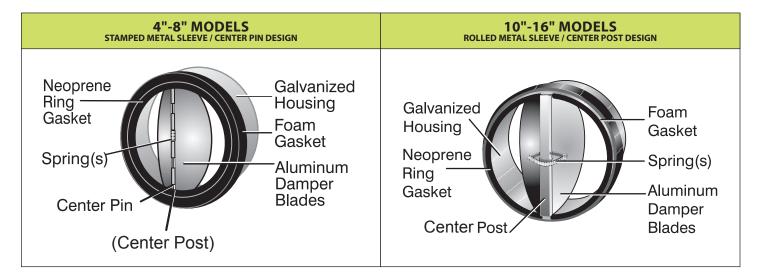


### **DESCRIPTION**

- 20-gauge galvanized steel housing.
- Aluminum spring-loaded butterfly damper blades.
- Damper seals against EDPM rubber gasket in closed position for minimal leakage.
- Gasket designed for use in temperatures from -22°F to180°F.
- Requires airflows of 0.04 to 0.08 in.
   w.g. to begin to open.
- May be installed in any position. The 14" and 16" models require adjusting spring tension if used in vertical position, with airflow down.
- The entire assembly inserts into duct for simple installation.
- Exterior foam gaskets provide a tight seal against interior surface of duct.

#### **NOTE**

Not recommended for use with clothes dryer, unless proper provisions are made for regular cleaning.

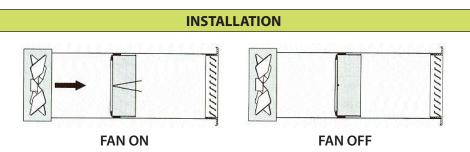

Backdraft dampers are simply fitted into the duct. The foam gasket provides a secure fit.

Make sure the damper is oriented so that the damper blades are in the open position when the fan is on. The blades will close automatically when the fan stops.

#### **MAINTENANCE**

No periodic mantenance required.

## **WARRANTY**

The entire unit is guaranteed for three (3) years, from date of shipment, against all manufacturing defects, provided the material has been installed and operated per manufacturer's instructions and under normal conditions. Warranty is limited to the repair or replacement of the material upon its return freight paid to our factory. This warranty is not transferable and is limited to the original end user.

© 2014 American ALDES Ventilation Corporation. Reproduction or distribution, in whole or in part, of this document, in any form or by any means, without the express written consent of American ALDES Ventilation Corporation, is strictly prohibited. The information contained within this document is subject to change without prior written notice.