



# AIRFLOW & ZONE CONTROLS

## CEG-II & CEG-II Twin

### Constant Exhaust Grilles

INSTALLATION  
OPERATION  
MAINTENANCE

## READ AND SAVE THESE INSTRUCTIONS

### Airflow Adjustment

#### CEG-II

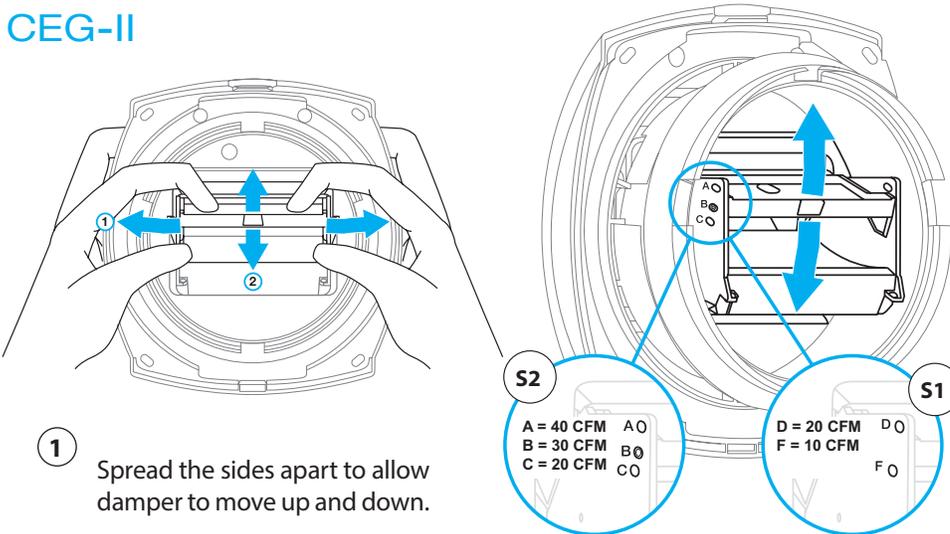


TABLE 1		
Airflow Codes	P/N	ID
<b>S1</b>	19 451 (collar)	11019090
	19 453 (wall-mount)	11019094
<b>S2</b>	19 452 (collar)	11019091
	19 454 (wall-mount)	11019095

#### CEG-II Twin

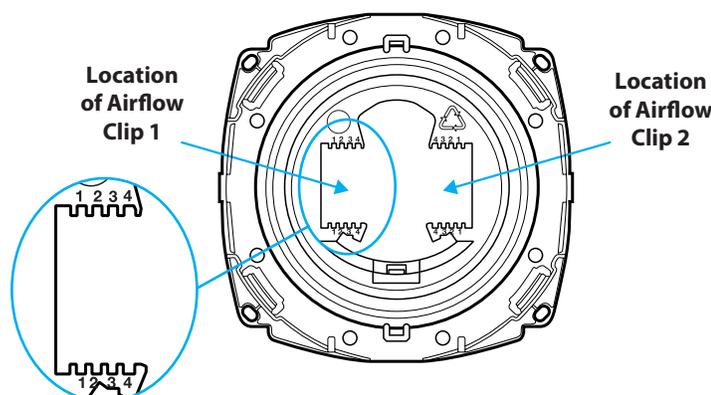
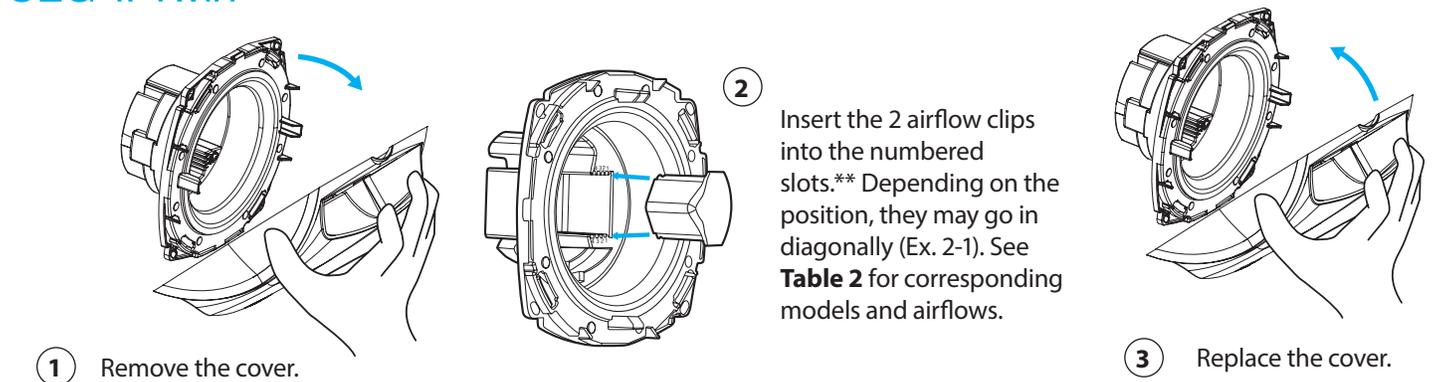


TABLE 2			
CEG-II Twin P/N (ID)	Airflow CFM (m <sup>3</sup> /h)	Position of Airflow Clip 1	Position of Airflow Clip 2
19 455 (11019188) 19 457 (11019187)	35 (60)*	2-1	1-1
	45 (75)	X	1-1
	50 (95)	X	X
19 456 (11019191) 19 458 (N/A)	60 (100)*	1-1	1-1
	70 (120)	X	1-1
	90 (150)	X	X


\* Factory Preset \*\* Slot positions are numbered 1-4.

Note: Other airflows may be obtained by moving the clips to provide a larger or smaller free area surrounding the regulating bulb.

# Mounting Options

## Insert Directly into Duct


Models: CEG-II (P/N 19 451, 19 452) and CEG-II Twin (P/N 19 455, 19 456)

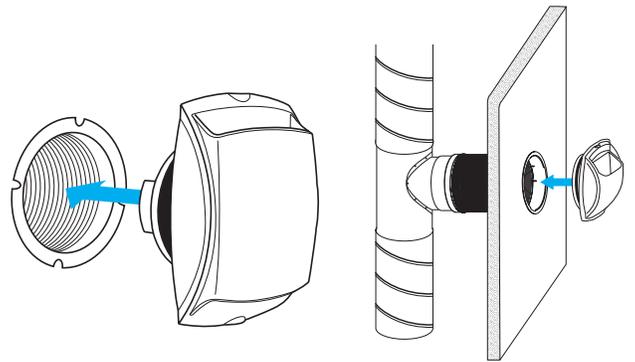


- 1 Press entire assembly into 5" round duct.

## Screw to Wall


Models: CEG-II (P/N 19 453, 19 454) and CEG-II Twin (P/N 19 457, 19 458)

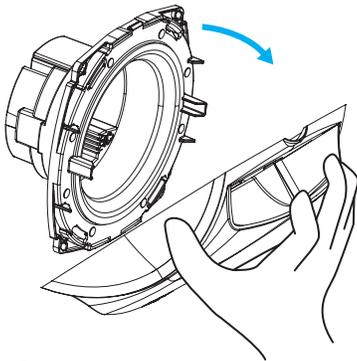

- 1 Remove the cover.

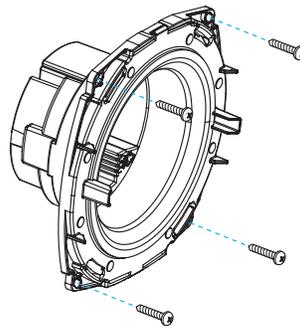


- 2 Orient the device so airflow enters from the top. Mount the assembly to the wall with screws and drywall anchors.

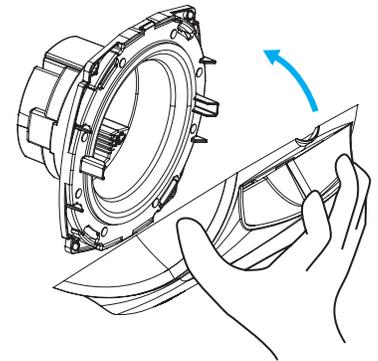


- 3 Replace the cover.

## Attach to Wall-Adapter Plate (P/N 19 460)


Models: CEG-II (P/N 19 453, 19 454) and CEG-II Twin (P/N 19 457, 19 458)

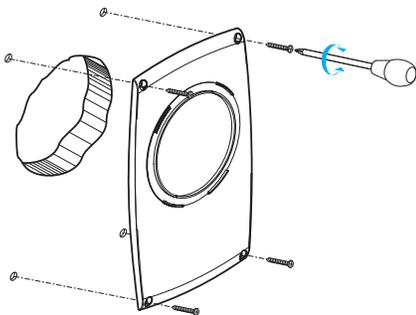

- 1 Mount the plate to the wall with screws and drywall anchors.

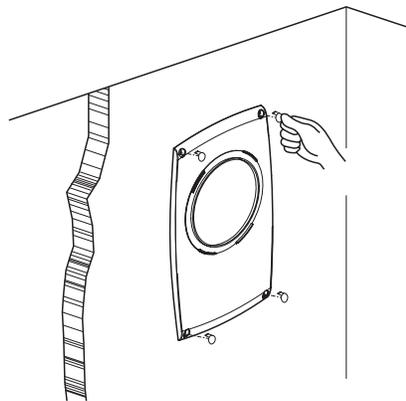

- 2 Cover the screw holes with the provided cap plugs.

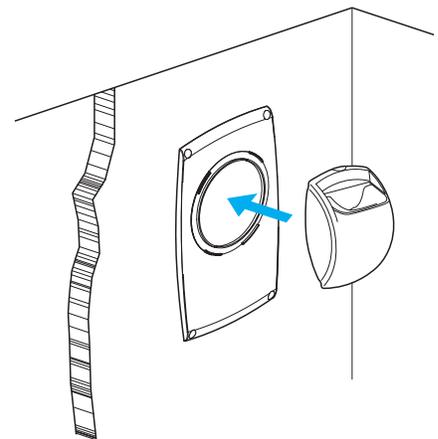


- 3 Orient the device so airflow enters from the top. Twist slightly and press into place until it clicks. Note: It may be preferable to attach the unit to the plate before mounting the plate to the wall.


NOTE: If using sound-absorbing ring insert (P/N 19 429), insert ring into duct at least 4" from the CEG-II or CEG-II Twin.

# Periodic Cleaning


## CEG-II

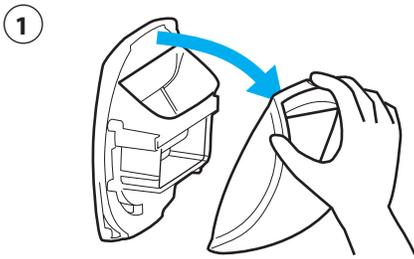


Remove the cover.

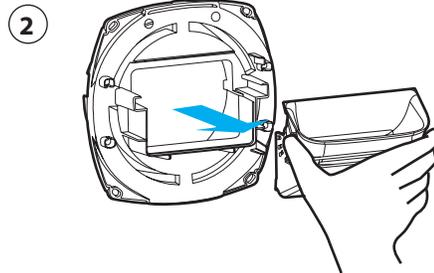


Remove the regulating element.

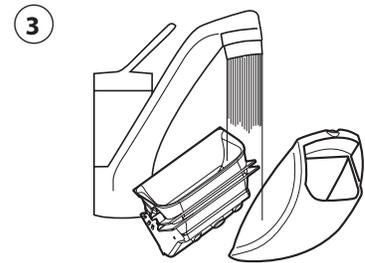


Handwash cover and regulating element. Dry with a clean cloth.

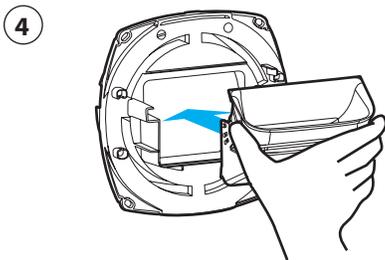

Insert the regulating element.

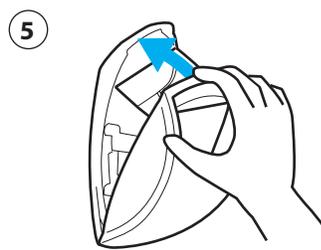


Replace the cover.

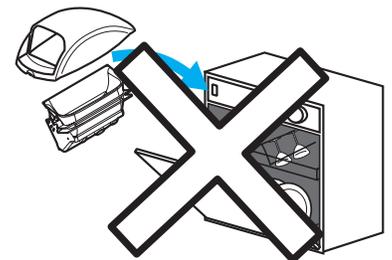


Do not put in dishwasher.


## CEG-II Twin

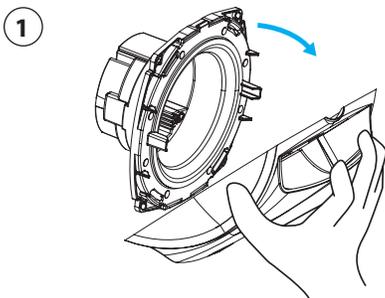


Remove the cover.

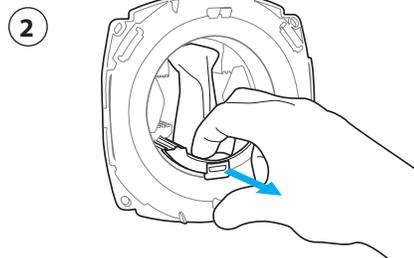


Remove the regulating element.  
Leave the airflow clips in place.

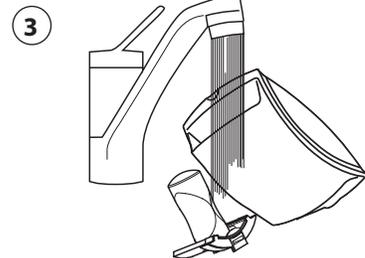


Handwash cover and regulating element. Dry with a clean cloth.

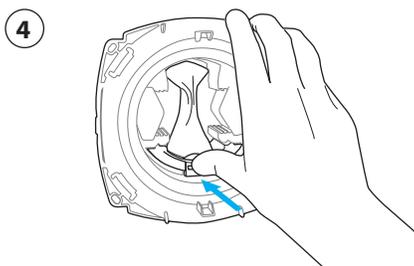

Insert the regulating element.

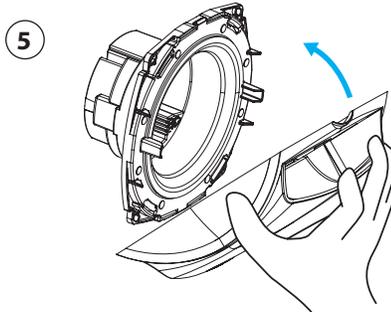

Replace the cover.

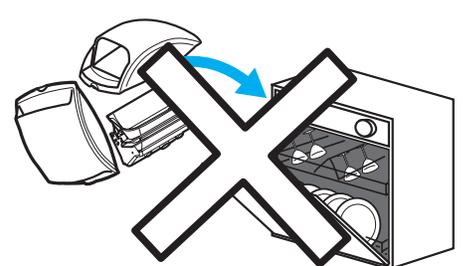

Do not put in dishwasher.

## THREE (3) YEAR WARRANTY

### THIS WARRANTY SUPERSEDES ALL PRIOR WARRANTIES

#### **DURING THE FIRST THIRTY (30) DAYS:**

American ALDES will repair or replace any product that has a factory defect in workmanship or material. Product(s) may be returned to point of purchase or the American ALDES factory, with Bill of Sale, for an immediate replacement.

#### **DURING THE FIRST THREE (3) YEARS:**

(Excluding the 30-day period above) American ALDES will repair or replace any product that has a factory defect in workmanship or material. Product(s) must be returned to the American ALDES factory, with Bill of Sale and identified with an RMA number, within three (3) years of purchase. The warrantee assumes all costs to and from the factory.

#### **WARRANTY DOES NOT APPLY TO THE FOLLOWING:**

1. Damages from shipping, either concealed or visible. Claim must be filed with the carrier.
2. Damages resulting from improper wiring or installation.
3. Damages or failure caused by Acts of God, or resulting from improper consumer procedures, such as:
  - Improper maintenance
  - Misuse, abuse, abnormal use, or accident
  - Incorrect electrical voltage or current
  - Removal or alterations made on the American ALDES label, control number, or date of manufacture.
4. Any other warranty, expressed, written, or implied, and to any consequential or incidental damages, loss of property, revenues, or profit, or costs of removal, installation, or reinstallation, for any breach of warranty.

#### **WARRANTY VALIDATION**

The end user must keep a copy of the Bill of Sale to verify purchase date. Valid proof of the date of installation may also serve as a verification of commencement of warranty period.

#### **AMERICAN ALDES RETURN POLICY**

Claims for damages or order shortages must be reported within ten (10) days of receipt of product(s). For any product(s) received damaged by the forwarding agent, the following instructions MUST BE followed:

1. For product(s) delivered by UPS:
  - Concealed Damages: Keep all cartons; call UPS for an inspection and notify American ALDES immediately.
  - Visible Damages: Save all cartons and file a complaint directly with UPS.
2. For product(s) delivered by Common Carrier: File damaged goods claim directly with the freight company.
3. Shortages: Only sign for the total number of pieces received and contact American ALDES immediately.

#### **FOR FACTORY RETURN**

AMERICAN ALDES WILL NOT ACCEPT THE RETURN OF ANY SPECIAL, NON-STOCK, OBSOLETE, OR UNSALABLE PRODUCT(S). AMERICAN ALDES MAY, AT ITS DISCRETION, ACCEPT RETURN OF SALABLE PRODUCT(S) SUBJECT TO A 25% RESTOCKING CHARGE.

1. No product(s) will be accepted without a Return Materials Authorization (RMA) number. This number can be obtained by calling American ALDES at 1-800-255-7749. Please have the Bill of Sale or proof of date of installation available.
2. RMA must be clearly marked on outside of carton or delivery will be refused. All product(s) must be returned freight prepaid.
3. Product(s) will be repaired/replaced and shipped back to buyer; no credits will be issued.
4. Any out-of-warranty product will be evaluated and buyer will be notified of cost. Repair cost will be charged to customer. Buyer will be responsible for return freight, or product may be returned to the buyer, freight collect, without action. No credit will be issued.

#### **LIMITATIONS OF WARRANTY AND LIABILITY**

This warranty does not apply to any American ALDES product or part which has failed as a result of faulty installation or abuse, incorrect electrical connections or alterations made by others, use under abnormal operating conditions, or misapplication of the product or parts. American ALDES will not approve for payment any repair not made by us or our authorized agent without prior written consent. The foregoing shall constitute our sole and exclusive warranty and our sole exclusive liability, and is in lieu of any other warranties, whether written, oral, implied, or statutory. There are no warranties that extend beyond the description herein. In no event, whether as a result of breach of contract or warranty, or alleged negligence, defect, incorrect advice or other causes, shall American ALDES be liable for special or consequential damages, including but not limited to, loss of profits or revenue, loss of use of equipment or any other associated equipment, cost of capital, cost of substitute equipment, facilities or services, downtime costs, or claims of customers of purchases for such damages. American ALDES neither assumes nor authorizes any person to assume for it any other liability in connection with the sale of product(s) or part(s). Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

#### **WARNING**

American ALDES products are designed and manufactured to provide reliable performance, but they are not guaranteed to be 100% free of defects. Even reliable products will experience occasional failures and this possibility should be recognized by the user. If these products are used in a life-support ventilation system where failure could result in loss or injury, the user should provide adequate back-up ventilation, supplementary natural ventilation, a failure alarm system, or willingly acknowledge the risk of such loss or injury.