















 





Ventergy® IAQ-BVS Continuous Duty IAQ Ventilation Kits

INSTALLATION
SUPPLEMENT

Locate your Ventergy® IAQ-BVS Kit name and part number on the carton. Use the table below to verify that you received all the components of your kit.
If something is missing, please contact 1-800-244-7749. See reverse for an overview of where the components should be installed.

IAQ-BVS KIT	Part Number (P/N)	VENTILATOR WITH CONSTANT AIRFLOW REGULATORS					SUPPLY AIR								RETURN AIR			INTAKE
		BVS Model	5" CAR-II (CFM)	4" CAR-II (CFM)	4" CAR-II (CFM)	4" CAR-II (CFM)	6" Algrille	6" Universal Sleeve	6" Backdraft Damper	6" x 6" x 6" Wye	8" Algrille	8" Universal Sleeve	8" Backdraft Damper	8" to 6" Conic Reducer	4" Deco Grille	4" Sleeve w/ Backdraft Damper	4" x 4" x 4" Wye	5" Galvanized Wall Hood
																		
IAQ-BVS120/514 (35/35) STD	25 714	BVS120/514	35/45/50	35/45/50	--	--	1	1	1	--	--	--	--	--	1	1	--	1
IAQ-BVS120/514 (40/35) STD	25 715	BVS120/514	40/50/60	35/45/50	--	--	1	1	1	--	--	--	--	--	1	1	--	1
IAQ-BVS120/514 (75/35) STD	25 716	BVS120/514	75/90/105	35/45/50	--	--	1	1	1	--	--	--	--	--	1	1	--	1
IAQ-BVS120/514L (35/10) STD	25 717	BVS120/514L	35/45/50	10/20/30	--	--	1	1	1	--	--	--	--	--	1	1	--	1
IAQ-BVS120/514L (40/10) STD	25 718	BVS120/514L	40/50/60	10/20/30	--	--	1	1	1	--	--	--	--	--	1	1	--	1
IAQ-BVS120/514L (75/10) STD	25 719	BVS120/514L	75/90/105	1020/30	--	--	1	1	1	--	--	--	--	--	1	1	--	1
IAQ-BVS120/524 (35/35) STD	25 724	BVS120/524	35/45/50	35/45/50	35/45/50	--	1	1	1	--	--	--	--	--	2	2	--	1
IAQ-BVS120/524 (40/35) STD	25 725	BVS120/524	40/50/60	35/45/50	35/45/50	--	1	1	1	--	--	--	--	--	2	2	--	1
IAQ-BVS120/524L (35/10) STD	25 727	BVS120/524L	35/45/50	10/20/30	10/20/30	--	1	1	1	--	--	--	--	--	2	2	--	1
IAQ-BVS120/524L (40/10) STD	25 728	BVS120/524L	40/50/60	10/20/30	10/20/30	--	1	1	1	--	--	--	--	--	2	2	--	1
IAQ-BVS120/524L (75/10) STD	25 729	BVS120/524L	75/90/105	10/20/30	10/20/30	--	1	1	1	--	--	--	--	--	2	2	--	1
IAQ-BVS200/524MAX (75/35)	25 726	BVS200/524MAX	75/90/105	35/45/50	35/45/50	--	2	2	2	1	--	--	--	--	2	2	--	1
IAQ-BVS200/534-3L (40/10) STD	25 733	BVS200/534-3L	40/50/60	10/20/30	10/20/30	10/20/30	2	2	2	1	--	--	--	--	3	3	--	1
IAQ-BVS200/534-3 (40/35) STD	25 734	BVS200/534-3	40/50/60	35/45/50	35/45/50	35/45/50	2	2	2	1	--	--	--	--	3	3	--	1
IAQ-BVS200/534-3MAX (75/35) STD	25 735	BVS200/534-3MAX	75/90/105	35/45/50	35/45/50	35/45/50	2	2	2	1	--	--	--	--	3	3	--	1
IAQ-BVS200/534-3MAXL (75/10) STD	25 736	BVS200/534-3MAXL	75/90/105	10/20/30	10/20/30	10/20/30	2	2	2	1	--	--	--	--	3	3	--	1
IAQ-BVS200/534-4 (75/10-60) STD	25 744	BVS200/534-4	75/90/105	10/20/30	10/20/30	40/50/60	2	2	2	1	--	--	--	--	4	4	1	1
IAQ-BVS200/534-5 (75/10-60) STD	25 754	BVS200/534-5	75/90/105	10/20/30	40/50/60	40/50/60	2	2	2	1	--	--	--	--	5	5	2	1
IAQ-BVS200/534-5 (75/10-60) 8" SA	25 704	BVS200/534-5	75/95/105	10/20/30	40/50/60	40/50/60	--	--	--	--	1	1	1	1	5	5	2	1
IAQ-BVS200/534-3L (40/10) 8" SA	25 783	BVS200/534-3L	40/50/60	10/20/30	10/20/30	10/20/30	--	--	--	--	1	1	1	1	3	3	--	1
IAQ-BVS200/534-3 (40/35) 8" SA	25 784	BVS200/534-3	40/50/60	35/45/50	35/45/50	35/45/50	--	--	--	--	1	1	1	1	3	3	--	1
IAQ-BVS200/534-3MAX (75/35) 8" SA	25 785	BVS200/534-3MAX	75/90/105	35/45/50	35/45/50	35/45/50	--	--	--	--	1	1	1	1	3	3	--	1
IAQ-BVS200/534-3MAXL (75/35) 8" SA	25 786	BVS200/534-3MAXL	75/90/105	10/20/30	10/20/30	10/20/30	--	--	--	--	1	1	1	1	3	3	--	1
IAQ-BVS200/534-4 (75/10-60) 8" SA	25 794	BVS200/534-4	75/90/105	10/20/30	10/20/30	40/50/60	--	--	--	--	1	1	1	1	4	4	1	1

Where to Install IAQ-BVS Kit Components

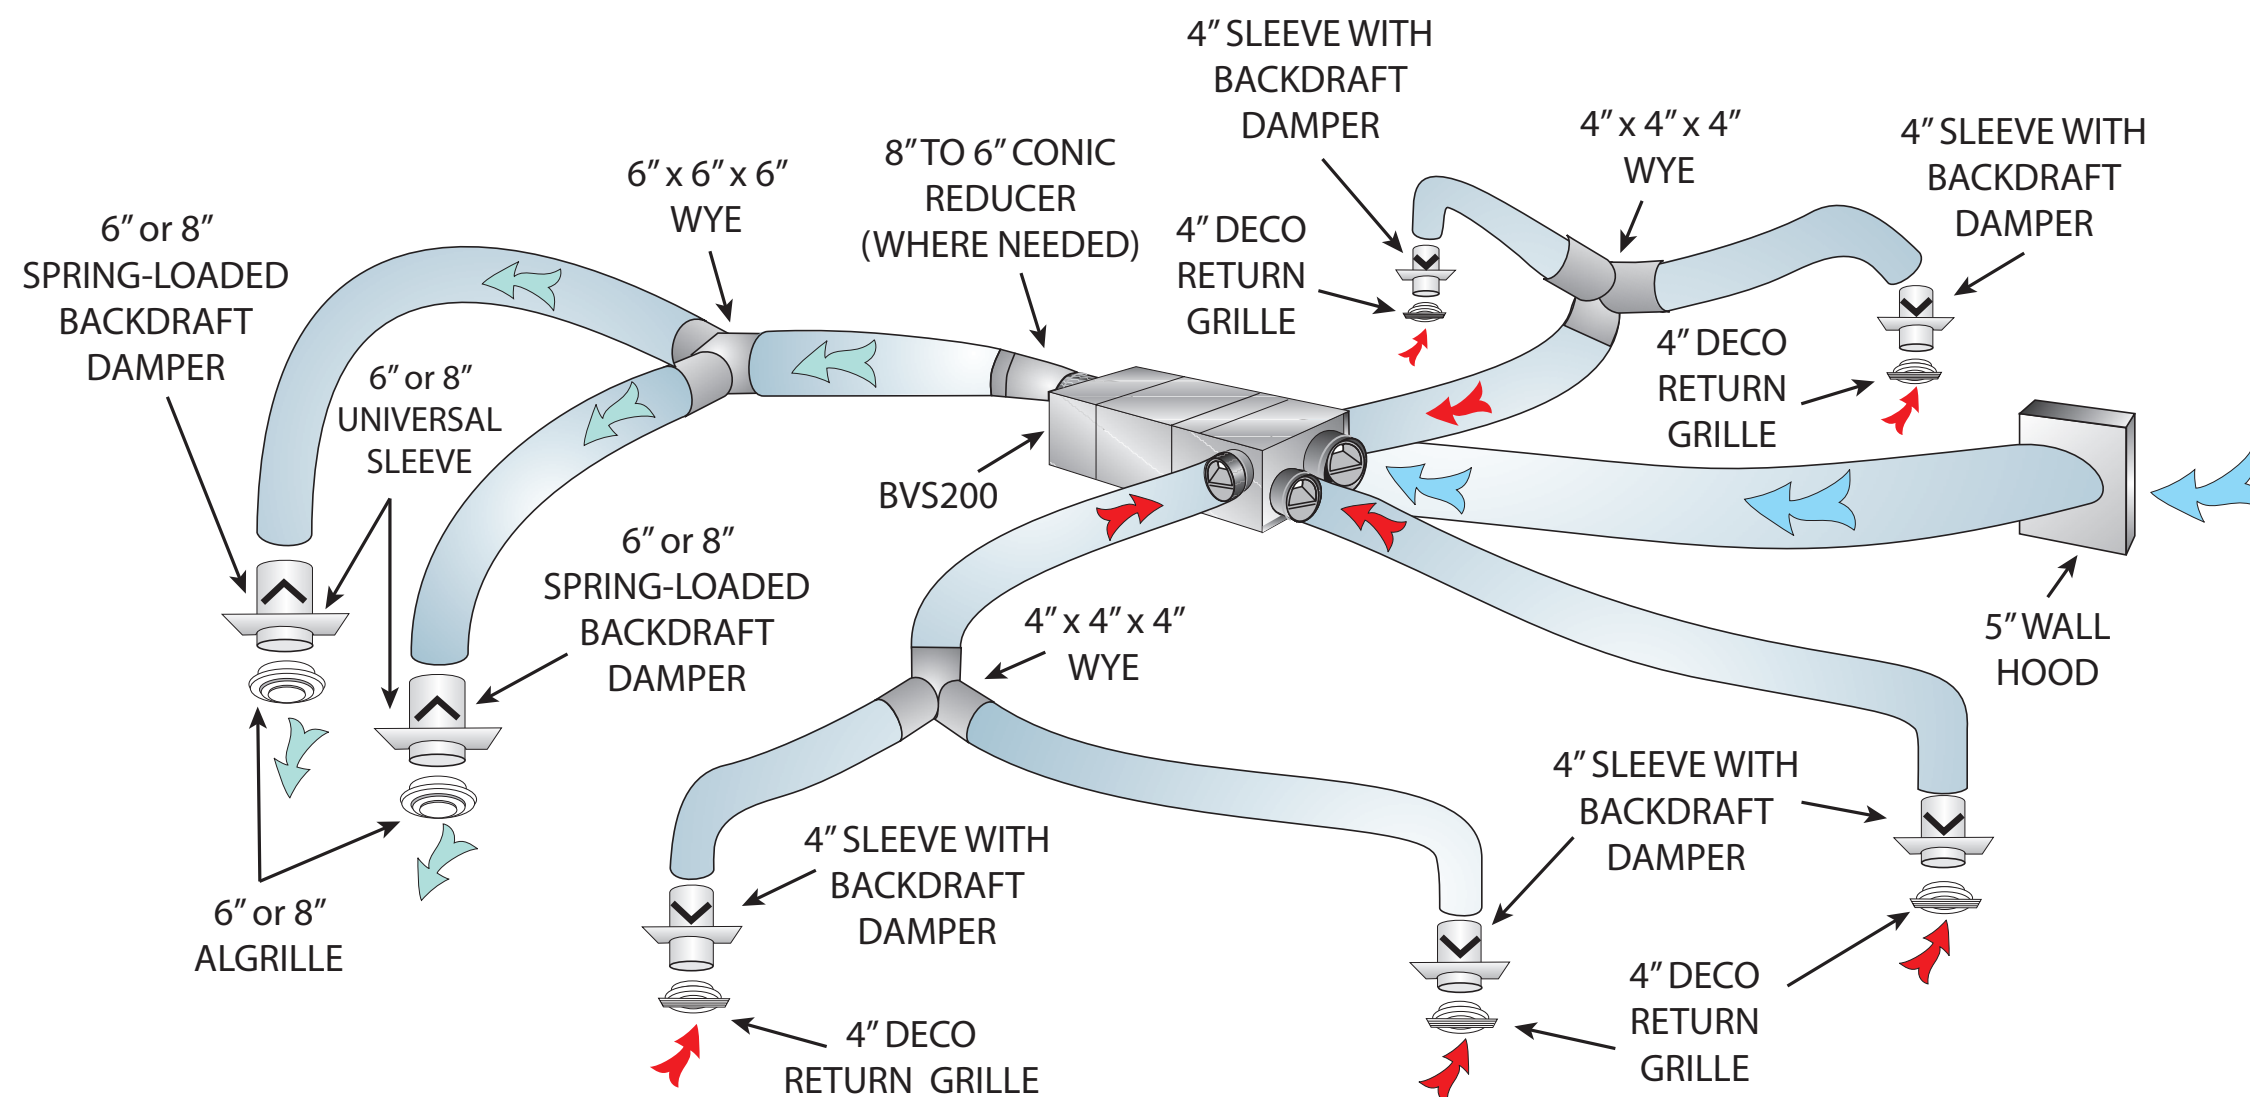

Artist's conception. Not to scale. See Installation Manual for mounting instructions.

NOTES

1. RETURN AIR – 4" **Deco Grilles** and sleeves are designed for ceiling installation. Installation in walls will require special spring-loaded backdraft dampers. Contact the factory for assistance.
2. SUPPLY AIR – All 6" or 8" supply grilles (**Algrilles**) and corresponding universal sleeves are designed for ceiling installation. The 6" and 8" **Spring-Loaded Backdraft Dampers** should be inserted into the **Universal Sleeves** by the installer and positioned so that the damper blades open downward.
3. OUTSIDE/FRESH AIR – A 5" low-pressure **Wall Hood** with debris screen is provided as an intake for outside air. It should be located at least 18" above the ground or snow line. While generally not required, a 5" backdraft damper can be ordered for installation in the wall hood collar. Contact the factory for assistance.
4. Constant Airflow Regulators (**CAR-II**) are provided in each BVS fan for automatic balancing of fresh, return, and supply air. They are installed at the factory and located in the BVS duct-attachment collars. If it is desirable to adjust airflow rates on the CAR-IIs, remove or add adjustment clips per **the attached table**. The CAR-IIs are oriented for the default fan mounting position (filter access door pointing down or to the side). If the fan is positioned so that the filter access door is located on the top of the fan, the CAR-IIs should be rotated 180° in the fan collars.



VENTERGY® SERIES FANS BVS120 & BVS200 Blending/Filtering Ventilators

INSTALLATION
OPERATION
MAINTENANCE

READ AND SAVE THESE INSTRUCTIONS

Ventergy® Series Ventilator Fans represent years of engineering development to combine the energy efficiency and sound performance of a forward-curved fan with the durability and pressure characteristics of a backward-inclined impeller fan.

BVS Series Blending Ventilators are highly versatile, continuous-duty rated units for residential applications. They meet ENERGY STAR efficiency criteria for low energy consumption. The BVS is designed to provide fresh outdoor air and blend it with indoor air drawn from bedrooms or areas typically not served by a central thermostat before filtering and distributing this air to the main living areas of the home. Thermal comfort is enhanced because warmer air is drawn naturally from the heated living areas to the cooler bedrooms.

BVS fans are designed to filter both indoor and incoming fresh air and prevent the introduction of contaminants as a result of unwanted infiltration through leaks in the building's envelope. By slightly pressurizing the structure, the BVS also reduces risk of backdrafting heating appliances, water heaters, and fireplaces. Quiet, continuous-duty, energy-efficient, external-rotor motors with permanently sealed bearings provide many years of maintenance-free performance.


CONSTRUCTION

The BVS series fans are constructed of heavy-gauge galvanized steel to prevent corrosion caused by moisture. The cabinet is internally lined with acoustic, closed-cell foam insulation that acts as a vapor barrier. This allows for installation directly above living spaces or in unheated plenum spaces without concern for noise or condensation. Duct connecting collars may be relocated on the fan intake manifold to accommodate different installation requirements.


FAN AND MOTOR

The fan motor is an energy-efficient, permanent-split-capacitor type of external-rotor design. Totally sealed to protect against moisture and contaminants, it incorporates permanently lubricated and sealed bearings and automatic-reset

HOW THE BVS120 & BVS200 WORKS

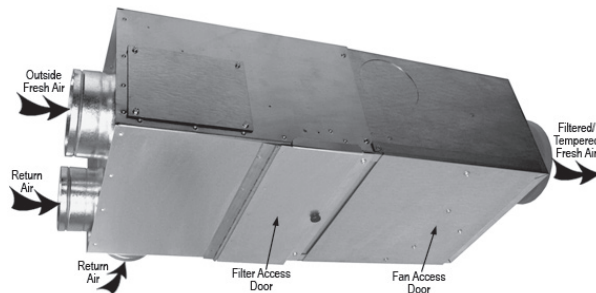

DUCT DIMENSIONS

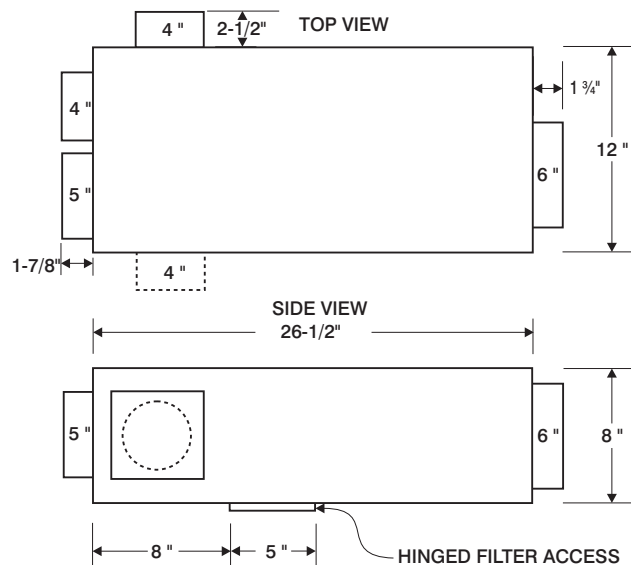

NOTE: Dashed lines indicate alternate side collar location

BVS120 & BVS200 ELECTRICAL AND AIRFLOW PERFORMANCE*

Model	Nominal RPM	HP	Watts at 0.2" Ps	CFM vs. Static Pressure				
				0"	0.2"	0.4"	0.6"	0.8"
BVS120	2146	0.06	43	186	152	122	94	67
BVS200	2960	0.08	66	261	236	210	186	162

*Certified airflow rating at 0.2" w.g. is derated from actual test results per HVI Certification procedure 920.

ELECTRICAL DATA – BVS120 & BVS200

120 V, 60 Hz., 0.35/0.53 Amp., 43/66 W Max.,
2146/2960 RPM

Above ratings are intended for sizing electrical wiring only.
Actual consumption will be lower.

thermal-overload protection. It is designed and certified for continuous duty or intermittent operation.

The fan uses a backward-inclined impeller design that minimizes dust collection on blades. Each fan is statically and dynamically balanced at the factory to eliminate vibration and ensure quiet operation. The entire motor and fan assembly is mounted on a drop-down hinged access panel for simple service and inspection, and it can be removed from the fan without disassembling the duct connections.

FAN CONTROLS

The fan can be operated manually or automatically by a programmable timer, dehumidistat, or other appropriate electronic switch device. The fan may also be operated in conjunction with a variable speed control.

FILTERS

Each BVS comes standard with a disposable-type pleated MERV 8 filter to comply with ASHRAE 62.2 and ENERGY STAR standards. Permanent washable electrostatic-type filters are also available.

LOCATING AND INSTALLING THE FAN

The compact dimensions and versatile mounting options permit installation above drop ceilings, between ceiling joists, or within a small soffit location. They can be installed horizontally or vertically.

ACCESSORIES

Accessories are available to accommodate applications ranging from single-bedroom apartments to five-bedroom houses. Accessories are included with the BVS only when ordered as a Ventergy® Series Continuous Duty IAQ Ventilation Kit.

AIRFLOW CONTROL OPTION AND BALANCING


Each return and fresh air duct take-off can accommodate an automatic self-balancing constant airflow regulator (CAR-II) that ensures precise flow rates at each point, independent of duct lengths. A damper mechanism within each CAR-II controls the net free area through the device in order to maintain constant velocity and net airflow rates.

MAINTENANCE


Monthly: Clean the exhaust and supply grilles.
Seasonally: Clean the fresh air intake wall hood.

Reference RDF Installation Supplement for warranty information.


CEILING MOUNT

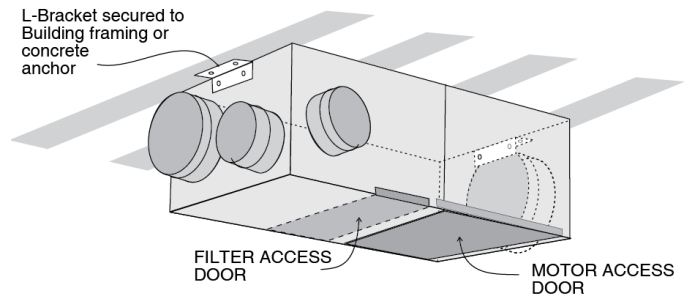


MOUNTING AGAINST WALL

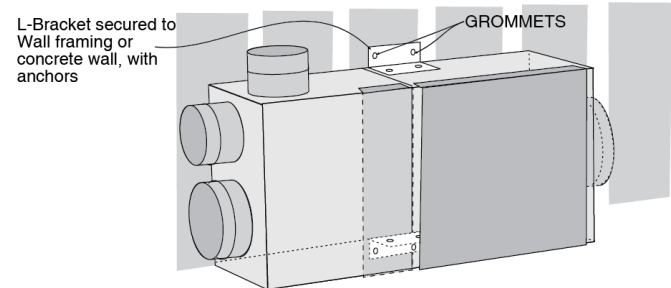

MOUNTING ON ATTIC FLOOR WITH RUBBER FEET

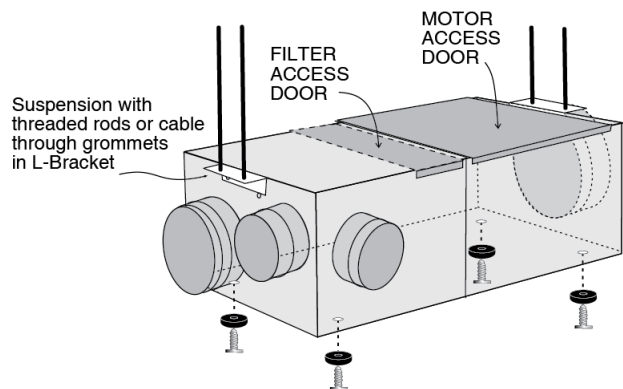

BVS120 & BVS200 COMPONENTS

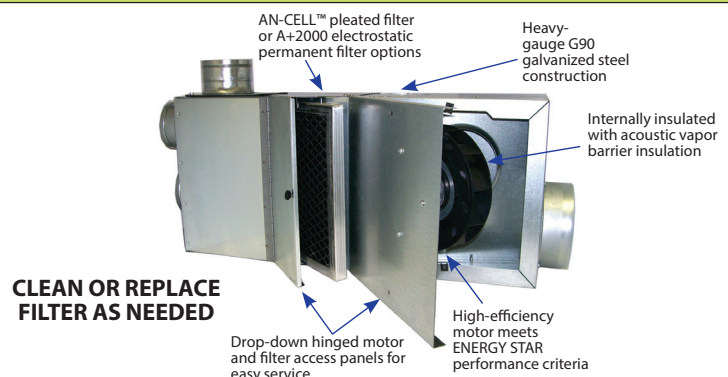



VENTERGY® SERIES FANS
RDF Installation Supplement
Rectangular Duct Fan

INSTALLATION
OPERATION
MAINTENANCE

READ AND SAVE THESE INSTRUCTIONS

For the following base models:

RDF 8-8IP, RDF 8-8MAX, RDF 12-8IP, RDF 12-8

(See supplemental instructions for derived models with duct adapters, manifolds, etc., as appropriate for your particular model.)

CAUTION

FOR GENERAL VENTILATING USE ONLY. DO NOT USE TO EXHAUST HAZARDOUS OR EXPLOSIVE MATERIALS AND VAPORS.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- A. Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.
- B. Before servicing or cleaning unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

In addition to the following manufacturer's instructions, it is necessary to comply with federal, state, and local government codes. Your purchase of this American ALDES ventilation system represents an investment in the health and comfort of occupants, as well as an investment in the protection of the building from the damaging effects of excessive indoor humidity.

This model of centrifugal fan is designed for multiple purposes. It may be used as an in-line rectangular duct fan (Model RDF) or a manifolded, multi-port fan for multiple exhaust or supply points. It may be installed in a remote location such as an attic space, mechanical room, above a drop ceiling, in a closet or in a laundry room, to provide quiet exhaust of stale, humid, or otherwise polluted air from bathrooms, kitchens, laundry rooms, or storage rooms via exhaust grilles and ducting to the centrally located fan, which is ducted to the outdoors. With

small return grilles in bedrooms and other areas, and one duct connection to the outdoors, such as the BVS models, it may also be used as a supply ventilator or recirculating central ventilator for the introduction of outdoor air, raising the temperature of the fresh air by mixing with recirculated indoor air. When used with adjustable balancing grilles or ALDES Constant Airflow Regulators (CAR) and compatible roof/wall caps, ducting, etc., the fan is the heart of a complete pre-engineered ventilation system.

SYSTEM DESIGN

Satisfactory performance of a central ventilation system requires the proper integration of all the components:

- Fan selection for airflow, pressure and acoustic properties, vibration characteristics and mounting method, and mode of operation (continuous, manually or automatically controlled)
- Proper duct design for friction losses, with compatible supply or exhaust grilles (airflow and acoustic properties of the supply/exhaust grilles), and compatible wall/roof caps
- Method of balancing airflows of multi-point ventilation systems
- Consideration for potential condensation in the ducting or fan housing (installation in an unheated space)

INSTALLATION

Upon receipt, inspect the carton to ensure the fan has not been damaged in transit. If damaged, it is the responsibility of the recipient to file a damage claim with the carrier. American ALDES Ventilation Corporation is not responsible for damage incurred during shipment.


Handle the unit with care to prevent damage to the housing and other components. Store the unit indoors if possible. If outdoor storage is required,

protection against moisture and dirt is necessary.

Unpack the unit, taking care to look for any loose components among the packing material. Make certain that the fan housing and the blower are free of any loose packing material or small parts. If not removed before startup, damage and injury may result from solid objects discharged by the blower. Inspect for damaged, loose, or missing parts.

A location should be chosen that will minimize the length of duct runs and the number of elbows that are required. If more than four (4) 90° elbows are required, 45° elbows should be used. If insulated flexible duct is used, the inner sleeve should be fully expanded over the entire duct run. Any turns that are necessary in the flexible duct run should be made as gradually as possible. Choose roof and/or wall caps that are of a more open, less restrictive design. The perimeter of all ceiling and wall penetrations for ductwork and grille(s) should be properly sealed with caulk or a similar material to ensure that there is not an air leakage path between the device and the wall and/or ceiling.

Install the unit in its final location. The fan may be installed in a mechanical room, crawl space, or attic. It is designed to be placed on a flat surface, against a wall or trusses, or suspended from above. If set on a flat surface, vibration-isolation pads are recommended. Mounting brackets with rubber grommets are supplied to permit installation against a vertical surface or from the ceiling. Alternately, the fan may be suspended using threaded rods or chains. At least 12 inches' clearance from the access panel is needed to permit servicing the motor. Loose fill or batt insulation can be installed over the unit if the unit's access doors can still be opened.

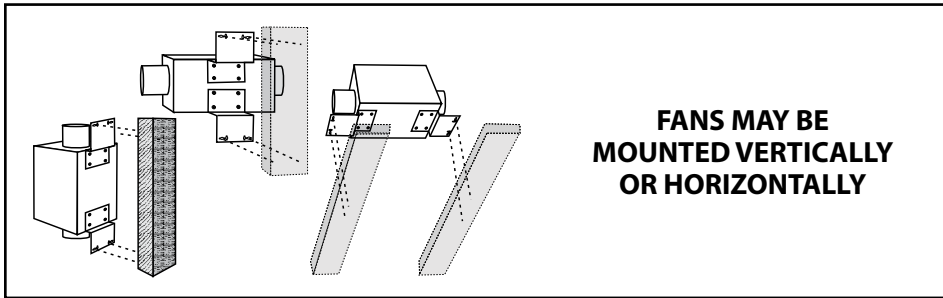

FANS MAY BE MOUNTED VERTICALLY OR HORIZONTALLY

MOUNTING INSTRUCTIONS

(Differences in bracket type and configuration may exist on some derived models. Refer to supplement where appropriate). Orient the fan so that the access door can be opened for service.

Tools Required:

Power screwdriver with No. 2 Phillips bit.

Mounting brackets are supplied with the fan. The brackets may be mounted to the fan using the self-drilling screws and rubber grommets provided, at the locations indicated by dimple marks on the side and bottom panels of the fan. Pan head number 10 screws are provided to attach the mounting bracket to the building framing members. It may be

necessary to add additional framing members to span wall studs. It is not recommended to use drywall anchors to support the fan. If installed against a concrete or masonry wall, concrete anchors are recommended. The rubber grommets provide vibration isolation. The brackets should be attached to the fan first. Then install the wood screws at the keyhole locations and install the fan.

The fan may also be mounted on a foam rubber pad on a flat surface, such as an attic floor.

COLD CLIMATE PRECAUTIONS

If installed in an unheated space in cold climates, there is a possibility of condensation forming in the fan housing

or ducting components. A backdraft damper installed at each grille is an effective way to reduce the potential for condensation when the fan is cycled on and off. Insulated ducting must be used where exposed to cold attic or crawl space temperatures to avoid condensation in the ducting. Condensation can also be avoided by continuous operation of the fan.

DUCT CONNECTIONS

Ducting may be flexible or rigid, depending on local codes. If permitted by code, insulated flexible ducting is recommended. To limit fan noise, at least 8 feet of insulated flexible duct shall be installed between the fan and grille(s). All flexible duct connections shall be secured with clamps or wire ties and sealed with mastic or code-approved duct tape. All rigid ducts are to be sealed on both ends and along the longitudinal seams with mastic or code-approved duct tape.

Ducting should conform to NFPA 90A and meet the requirements of UL as a Class 0 or Class 1 duct to specification UL 181, Standard for Factory-Made Air Ducts and Duct Connectors.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel-burning equipment to prevent backdrafting. Follow the heating equipment manufacturer's guidelines and safety standards such as those published by the National Fire Protection Association (NFPA), the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
- When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- When used as exhaust fans, ducted fans must always be vented to the outdoors.
- If this unit is to be installed over a tub or shower, it must be marked as appropriate for the application and be connected to a GFCI- (Ground Fault Circuit Interrupter) protected branch circuit.
- NEVER place a switch where it can be reached from a tub or shower.


ELECTRICAL DATA

Provide disconnect switch in vicinity of fan to permit servicing fan in accordance with NEC and local codes.


Depending on the desired mode of operation, switches may be simple on-off switches, motor speed controls, timer switches, time delay, time-of-day cycle timers, dehumidistats, occupancy sensing controls, controllers, etc., provided they are rated for the motor duty and meet the nameplate electrical ratings of the motor. (Additional application wiring diagrams illustrating a variety of controls for use with RDF fans are available by calling the factory at 1-800-255-7749.)

Base Model	Volts	Max Amps	Max Watts	RPM
RDF 8-8IP	115	0.19	21	2500
RDF 8-8MAX	115	0.29	34	3135
RDF 12-8IP	115	0.34	41	2200
RDF 12-8	115	0.53	59	2960

RDF 8-8MAX and RDF 12-8

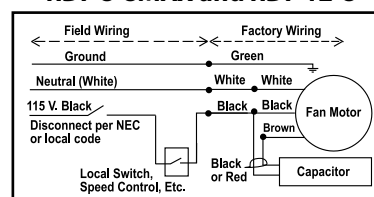

RDF 8-8IP and RDF 12-8IP

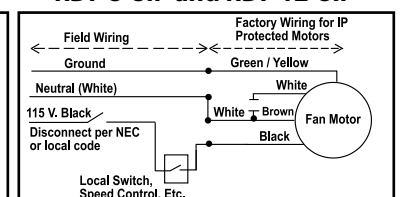

MAINTENANCE

Monthly:

Inspect and clean the exhaust grilles and filters, if so equipped.

Annually:

To ensure the maximum efficiency of the fan unit, it is recommended to clean the inside of the fan box as well as the blower wheel.

CAUTION

Automatically operated device. To reduce risk of injury, disconnect from the power supply before servicing.

DISASSEMBLY

Turn off all power to the unit. The blower may be inspected and cleaned by removing the two screws from the hinged access panel. The blower assembly can now be swung open for cleaning the wheel.

DISCLAIMER

IT IS THE RESPONSIBILITY OF THE CONTRACTOR/INSTALLER TO DETERMINE THE SUITABILITY OF THIS EQUIPMENT WITH RESPECT TO THE POTENTIAL FOR BACKDRAFTING NATURALLY VENTED FLUE DEVICES AND/OR AFFECTING RADON ENTRY.

IMPACT OF EXHAUST FANS


In especially tight homes heated with naturally vented appliances, such as gas, oil or wood-fired furnaces, boilers, stoves or fireplaces, the exhaust system may produce sufficient negative pressure indoors to induce the backdrafting of flue gases. This is a common, though intermittent, occurrence, with conventional exhaust systems, such as vented kitchen range hoods, clothes dryers, bath fans, etc. In the case of continuous exhaust, though often

at lower flow rates, the potential for backdrafting the flue of these appliances does exist and represents a dangerous situation.

The International Fuel Gas Code, Appendix D http://www2.iccsafe.org/states/Seattle/seattle_fuelgas/PDFs_fuelgas/Appendix%20D.pdf provides a Recommended Procedure for Safety Inspection of an Existing Appliance Installation. This procedure should be followed to determine the presence of adequate combustion air while all exhaust fans are operating at maximum speed and all doors and windows are closed.

In the event that backdrafting occurs, steps must be taken to provide sufficient combustion air to the furnace or boiler, following the guidelines of the National Fuel Gas Code and all state and local codes.

For installations in which the fan is connected to a range hood, or if an exhaust grille connected to the fan is located near the cooking surface (as shown below), be sure to observe the following safety warnings:

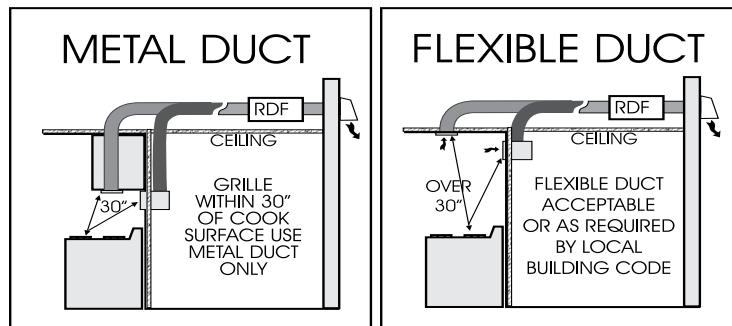

WARNING

TO REDUCE THE RISK OF FIRE, USE ONLY GALVANIZED STEEL DUCTWORK WHEN REQUIRED TO USE METAL DUCT.

NOTE: If only rigid ducting is allowed, a metal sound attenuator shall be installed between the fan and the range hood.

NOTE: If the fan is not connected to a range hood or a grille in the vicinity of the cooking surface, other approved ducting may be used as described in the "Duct Connections" section of basic instructions.

WARNING

TO REDUCE THE RISK OF A RANGE-TOP GREASE FIRE:

- Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
- Always turn range hood ON when cooking at high heat or flambeing food.
- Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.
- Use proper pan size. Always use cookware appropriate for the size of the surface element.

^aBased on "Kitchen Fire Safety Tips" published by NFPA.

WARNING

TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE-TOP GREASE FIRE, OBSERVE THE FOLLOWING:

- SMOTHER FLAMES with a close-fitting lid, cookie sheet, or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS. If the flames do not go out immediately, EVACUATE AND CALL THE FIRE DEPARTMENT.
- NEVER PICK UP A FLAMING PAN - You may be burned.
- DO NOT USE WATER, including wet dishcloths or towels, because a violent steam explosion could result.
- Use an extinguisher ONLY if:
 - You know you have a Class ABC extinguisher, and you already know how to operate it.
 - The fire is small and contained in the area where it started.
 - The fire department is being called.
 - You can fight the fire with your back to an exit.

MECHANICAL SUPPLY FANS

Mechanical supply of outdoor air tends to reduce the potential and frequency of backdrafting by reducing the contributing negative pressures; however, due to a multitude of factors, including the wide range of exhausting appliances that may be present, the effects of wind and building shape, the presence of multiple chimneys, building leakage, and the use of operable windows, no one can assure elimination of backdraft conditions so long as atmospherically vented combustion equipment is present in the home.

REPLACEMENT PARTS LIST (BASE MODELS)

Model	Motor P/N	Impeller Dimensions (mm)	Capacitor	
			P/N	Cap
RDF 8-8IP*	86 561	133 x 42	86 172	4uF
RDF 8-8 MAX	86 561	133 x 45	86 172	4uF
RDF 12-8IP*	86 562	180 x 35	86 174	10uF
RDF 12-8	86 562	180 x 35	86 170	5uF

*Designates Impedance Protection with alternate wiring of capacitor across auxiliary winding of motor.

American ALDES Ventilation Corporation accepts no liability for backdraft conditions resulting from negative pressures. Nor does American ALDES make representation that blending supply ventilators (BVS) are adequate to prevent such occurrences.

THREE (3) YEAR WARRANTY

THIS WARRANTY SUPERSEDES ALL PRIOR WARRANTIES

DURING THE FIRST THIRTY (30) DAYS:

American ALDES will repair or replace any product that has a factory defect in workmanship or material. Product(s) may be returned to point of purchase or the American ALDES factory, with Bill of Sale, for an immediate replacement.

DURING THE FIRST THREE (3) YEARS:

(Excluding the 30-day period above)

American ALDES will repair or replace any product that has a factory defect in workmanship or material. Product(s) must be returned to the American ALDES factory, with Bill of Sale and identified with an RMA number, within three (3) years of purchase. The warrantee assumes all costs to and from the factory.

WARRANTY DOES NOT APPLY TO THE FOLLOWING:

- Damages from shipping, either concealed or visible. Claim must be filed with the carrier.
- Damages resulting from improper wiring or installation.
- Damages or failure caused by Acts of God, or resulting from improper consumer procedures, such as:
 - Improper maintenance
 - Misuse, abuse, abnormal use, or accident
 - Incorrect electrical voltage or current
 - Removal or alterations made on the American ALDES label, control number, or date of manufacture.
- Any other warranty, expressed, written, or implied, and to any consequential or incidental damages, loss of property, revenues, or profit, or costs of removal, installation, or reinstallation, for any breach of warranty.

WARRANTY VALIDATION

The end user must keep a copy of the Bill of Sale to verify purchase date. Valid proof of the date of installation may also serve as a verification of commencement of warranty period.

AMERICAN ALDES RETURN POLICY

Claims for damages or order shortages must be reported within ten (10) days of receipt of product(s). For any product(s) received damaged by the forwarding agent, the following instructions MUST BE followed:

- For product(s) delivered by UPS:
 - Concealed Damages: Keep all cartons; call UPS for an inspection and notify American ALDES immediately.
 - Visible Damages: Save all cartons and file a complaint directly with UPS.
- For product(s) delivered by Common Carrier: File damaged goods claim directly with the freight company.
- Shortages: Only sign for the total number of pieces received and contact American ALDES immediately.

FOR FACTORY RETURN

AMERICAN ALDES WILL NOT ACCEPT THE RETURN OF ANY SPECIAL, NON-STOCK, OBSOLETE, OR UNSALABLE PRODUCT(S). AMERICAN ALDES MAY, AT ITS DISCRETION, ACCEPT RETURN OF SALABLE PRODUCT(S) SUBJECT TO A 25% RESTOCKING CHARGE.

- No product(s) will be accepted without a Return Materials Authorization (RMA) number. This number can be obtained by calling American ALDES at 1-800-255-7749. Please have the Bill of Sale or proof of date of installation available.
- RMA must be clearly marked on outside of carton or delivery will be refused. All product(s) must be returned freight prepaid.
- Product(s) will be repaired/replaced and shipped back to buyer; no credits will be issued.
- Any out-of-warranty product will be evaluated and buyer will be notified of cost. Repair cost will be charged to customer. Buyer will be responsible for return freight, or product may be returned to the buyer, freight collect, without action. No credit will be issued.

LIMITATIONS OF WARRANTY AND LIABILITY

This warranty does not apply to any American ALDES product or part which has failed as a result of faulty installation or abuse, incorrect electrical connections or alterations made by others, use under abnormal operating conditions, or misapplication of the product or parts. American ALDES will not approve for payment any repair not made by us or our authorized agent without prior written consent. The foregoing shall constitute our sole and exclusive warranty and our sole exclusive liability, and is in lieu of any other warranties, whether written, oral, implied, or statutory. There are no warranties that extend beyond the description herein. In no event, whether as a result of breach of contract or warranty, or alleged negligence, defect, incorrect advice or other causes, shall American ALDES be liable for special or consequential damages, including but not limited to, loss of profits or revenue, loss of use of equipment or any other associated equipment, cost of capital, cost of substitute equipment, facilities or services, downtime costs, or claims of customers of purchases for such damages. American ALDES neither assumes nor authorizes any person to assume for it any other liability in connection with the sale of product(s) or part(s). Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

WARNING

American ALDES products are designed and manufactured to provide reliable performance, but they are not guaranteed to be 100% free of defects. Even reliable products will experience occasional failures and this possibility should be recognized by the user. If these products are used in a life-support ventilation system where failure could result in loss or injury, the user should provide adequate back-up ventilation, supplementary natural ventilation, a failure alarm system, or willingly acknowledge the risk of such loss or injury.



AIRFLOW & ZONE CONTROLS
CAR-IIA
 Adjustable Constant Airflow Regulator

PRODUCT
 SPECIFICATIONS
 & TECHNICAL
 DATA



Adjustable Constant Airflow Regulators (CAR-IIA) can be field adjusted to the desired airflow by removing the aero-clips. Each clip removed increases the free-area opening, allowing more air to pass through the device.

DIAMETER	PART NUMBER	REGULATED CFM			
		0 CLIPS REMOVED *	1 CLIP REMOVED	2 CLIPS REMOVED	3 CLIPS REMOVED
4"	18 110A	10	15	25	--
	18 111A	10	20	30	--
	18 115A	35	45	50	--
	18 109A	40	50	60	--
5"	18 121A	35	45	50	--
	18 124A	75	90	105	--
6"	18 131A	75	90	105	--
	18 134A	125	140	160	175
8" **	18 141A	125	140	160	175
	18145A	205	235	265	295
10"	18 151A	205	235	265	295
	18 155A	325	355	380	410

*** IMPORTANT:** All Adjustable CAR-IIs are shipped at the "0 Clips Removed" setting.

**** NOTE:** To increase the airflow in the 8" CAR-IIA, simply move the aero-clip to the next higher notch.

© 2013 American ALDES Ventilation Corporation. Reproduction or distribution, in whole or in part, of this document, in any form or by any means, without the express written consent of American ALDES Ventilation Corporation, is strictly prohibited. The information contained within this document is subject to change without prior written notice.

American ALDES Ventilation Corporation • 4521 19th Street Court East, Suite 104 • Bradenton, FL 34203 – USA
 941.351.3441 • 800.255.7749 • 941.351.3442 (fax) • info@americanaldes.com • www.americanaldes.com

CAR-IIA_spec_0813





AIRFLOW & ZONE CONTROLS

Backdraft Dampers

Spring-Loaded Backdraft Dampers

INSTALLATION
OPERATION
MAINTENANCE

READ AND SAVE THESE INSTRUCTIONS

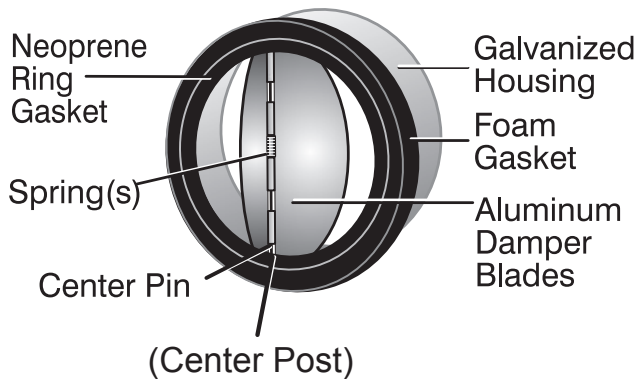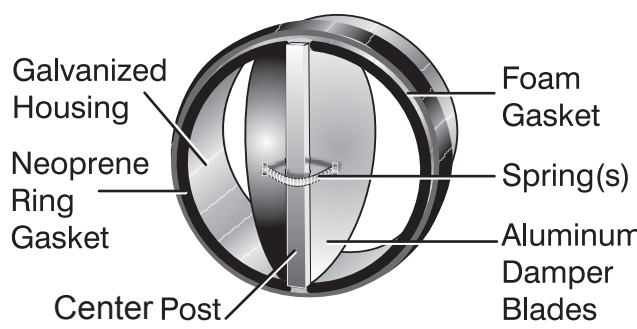4"-8" MODELS STAMPED METAL SLEEVE / CENTER PIN DESIGN	10"-16" MODELS ROLLED METAL SLEEVE / CENTER POST DESIGN
 <p>Neoprene Ring Gasket</p> <p>Galvanized Housing</p> <p>Foam Gasket</p> <p>Spring(s)</p> <p>Aluminum Damper Blades</p> <p>Center Pin (Center Post)</p>	 <p>Galvanized Housing</p> <p>Foam Gasket</p> <p>Neoprene Ring Gasket</p> <p>Spring(s)</p> <p>Aluminum Damper Blades</p> <p>Center Post</p>


DESCRIPTION

- 20-gauge galvanized steel housing.
- Aluminum spring-loaded butterfly damper blades.
- Damper seals against EDPM rubber gasket in closed position for minimal leakage.
- Gasket designed for use in temperatures from -22°F to 180°F.
- Requires airflows of 0.04 to 0.08 in. w.g. to begin to open.
- May be installed in any position. The 14" and 16" models require adjusting spring tension if used in vertical position, with airflow down.
- The entire assembly inserts into duct for simple installation.
- Exterior foam gaskets provide a tight seal against interior surface of duct.

NOTE

Not recommended for use with clothes dryer, unless proper provisions are made for regular cleaning.

INSTALLATION

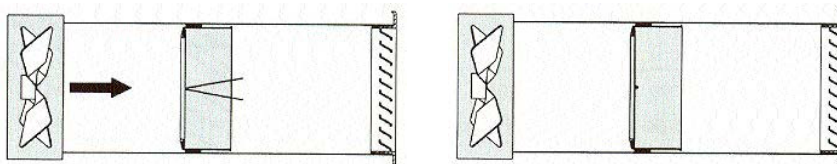

FAN ON

FAN OFF

Backdraft dampers are simply fitted into the duct. The foam gasket provides a secure fit.

Make sure the damper is oriented so that the damper blades are in the open position when the fan is on. The blades will close automatically when the fan stops.

MAINTENANCE

No periodic maintenance required.

WARRANTY

The entire unit is guaranteed for three (3) years, from date of shipment, against all manufacturing defects, provided the material has been installed and operated per manufacturer's instructions and under normal conditions. Warranty is limited to the repair or replacement of the material upon its return freight paid to our factory. This warranty is not transferable and is limited to the original end user.

© 2014 American ALDES Ventilation Corporation. Reproduction or distribution, in whole or in part, of this document, in any form or by any means, without the express written consent of American ALDES Ventilation Corporation, is strictly prohibited. The information contained within this document is subject to change without prior written notice.



ROOF CAPS, WALL HOODS, GRILLES & DUCT FITTINGS

Algrilles

Supply/Exhaust Grilles

PRODUCT SPECIFICATIONS & TECHNICAL DATA



ALGRILLES

- Supply/Exhaust
- Available in 3", 4", 5", 6", & 8"
- Fully adjustable for variable airflow capacity
- Rotating center-adjustment cone
- Easy to install
- Durable white plastic (polypropylene co-polymer with HB UL rating)



HOW TO USE THE ALGRILLE

The center adjustment cone allows for variable ventilation capacity.

After installing your Algrille vents and connecting them to the ductwork from your ventilator, begin balancing the ventilation ports by increasing openings on the most distant Algrille until the flow is satisfactory throughout the building. Usually two rounds of balancing will provide the desired air distribution.

INSTALLATION


Compression-spring tab clips the Algrille into 4", 5", 6", or 8" round duct.

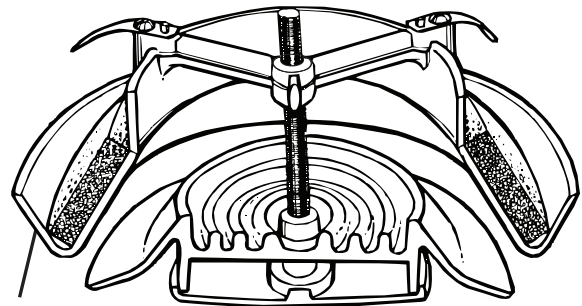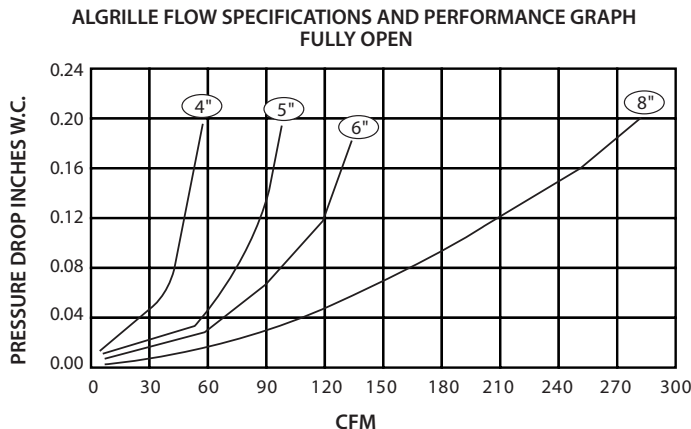

Foam for tight seal and sound attenuation.

Dimensional Data

P/N	SIZE	A	B	C	D
40 103	3"	2-7/8"	1"	1" to 1-7/8"	4-5/8"
40 104	4"	3-1/4"	1"	1-7/8" to 3-1/4"	5-7/8"
40 105	5"	3-1/2"	1-1/4"	2" to 3-1/4"	6-1/4"
40 106	6"	4-11/16"	1"	1-3/4" to 3-1/4"	7-1/2"
40 108	8"	6-3/4"	1-3/4"	2-1/2" to 3-3/4"	9-5/8"

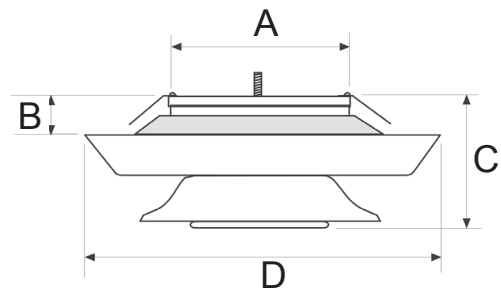

© 2013 American ALDES Ventilation Corporation. Reproduction or distribution, in whole or in part, of this document, in any form or by any means, without the express written consent of American ALDES Ventilation Corporation, is strictly prohibited. The information contained within this document is subject to change without prior written notice.