

Motorized Dampers



#HealthyLiving

aldes

Motorized Dampers



Application Notes

- Normally closed dampers are standard.
- Specify normally open dampers as an option.
- 24 or 120 Volt models available.
- Both 24 Volt and 120 Volt models supplied with end switch rated for a 10 amp load. The end switch permits sequencing the operation of a remote fan after damper is opened, enabling use of remote fans to ventilate selectively (individual bathrooms, kitchen, etc.).
- Possible controls for use with zoned ventilation systems include: Manual spring-wound time delay, electronic time delay, cycle timer, programmable timers, occupancy-and-humidity-sensing switches.

ORDERING INFORMATION

MODEL	VOLTAGE	END SWITCH	DAMPER NORMALLY CLOSED (Part Number)	DAMPER NORMALLY OPEN (Part Number)
MD4"	24 V	Yes	#23 037NCES	#23 037 NOES
MD4"	120 V	Yes	#23 038NCES	#23 038 NOES
MD5"	24 V	Yes	#23 039NCES	#23 039 NOES
MD5"	120 V	Yes	#23 043NCES	#23 043 NOES
MD6"	24 V	Yes	#23 040NCES	#23 040 NOES
MD6"	120 V	Yes	#23 041NCES	#23 041 NOES
MD8"	24 V	Yes	#23 044NCES	#23 044 NOES
MD8"	120 V	Yes	#23 045NCES	#23 045 NOES
MD10"	24 V	Yes	#23 046NCES	#23 046 NOES
MD10"	120 V	Yes	#23 047NCES	#23 047 NOES
MD12"	24 V	Yes	#23 048NCES	#23 048 NOES
MD12"	120 V	Yes	#23 049NCES	#23 049 NOES
MD14"	24 V	Yes	#23 050NCES	#23 050 NOES
MD14"	120 V	Yes	#23 051NCES	#23 051 NOES

DIMENSIONS

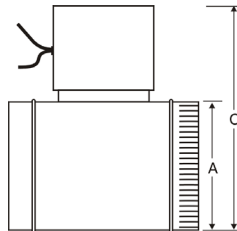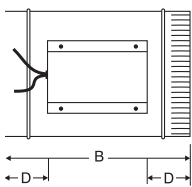

	4"	5"	6"	7"	8"	10"	12"	14"
A	4"	5"	6"	7"	8"	10"	12"	14"
B	4"	5"	6"	7"	8"	10"	12"	14"
C	7"	8"	9"	10"	11"	13"	15"	17"
D	1.38"	1.38"	1.38"	1.88"	2.38"	3.38"	4.38"	5.5"

24 and 120 VAC Round Damper Wiring Instructions

Important: Always wire according to local codes.

Damper Wiring Identification


Black Leads: 24 or 120 Volt input

Green Lead: Ground

Red Leads: (If equipped with end switch) 24 or 120 Volt, 10 amps

To Remove/Install Motor Cover (120 V only)

- To remove cover, press in and lift up on end of motor cover with wire hole.
- To install motor cover, place tab on solid end of cover into small slot in motor mount. Swing cover over motor and slip second tab into larger slot.

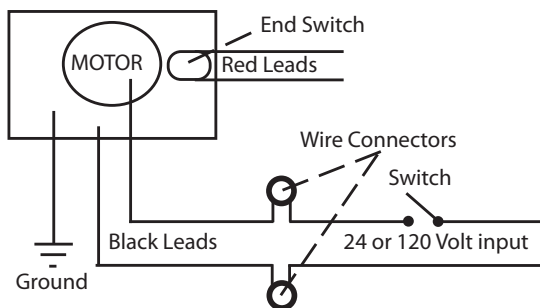

Flow Control Adjustment

MINIMUM FLOW ADJUSTMENT Minimum airflow can be set by loosening the bolt on the shaft and turning the damper from the fully closed position to leave a gap between the gasket and the damper blade. Re-tighten the bolt with the damper at the desired opening.

MAXIMUM FLOW ADJUSTMENT (Available only on models without end switch) Maximum airflow can be set by loosening the flow control adjustment bolt. When set, this bolt acts as a stop, limiting the opening of the damper blade. It is pre-set at the factory to open fully. To adjust, loosen the bolt lock nut, turn the adjusting bolt to the desired setting, and re-tighten the bolt lock nut. Activate the motor after each adjustment to properly reset the motor and damper blade.

For more information, contact your Aldes sales advisor, visit aldes-na.com, call 1.800.255.7749, or find us on

