



Light Commercial HRV/ERV controls allow you to easily activate a variety of functions at the touch of a button. Each control fits inside any 2" x 4" service box. All controls include retaining screws and a white deco wall plate.

HRV / ERV CONTROLS

For Standard Residential, Multi-Family, and Light Commercial HRV/ERV Models

20/40/60 Minute Timer, Speed, Mode, and Digital Multifunction Controls

20/40/60 Minute Timer (P/N 611228)



- Activates the HRV/ERV to operate on high-speed mode for 20, 40, or 60 minutes
- Works with Digital Multifunction Control (P/N 611242)
- 24 VAC
- Fits inside 2" x 4" service box
- Includes retaining screws and white Decora™-style faceplate

Speed Control (P/N 611229)



- 4 HRV/ERV speeds:
 - » Intermittent mode (successive cycles, low-speed 20-minute exchange, 40-minute stop mode)
 - » Low-speed exterior exchange mode
 - » High-speed exterior exchange mode
 - » Unit stop mode
- 24 VAC
- Includes retaining screws and white Decora™-style faceplate

Mode Control (P/N 611230)



- 4 modes of HRV/ERV operation:
 - » Recirculation mode
 - » Low-speed exterior exchange mode
 - » High-speed exterior exchange mode
 - » Unit stop mode
- 24 VAC
- Includes retaining screws and white Decora™-style faceplate

Digital Multifunction Control (P/N 611242)



- Complete control over HRV/ERV:
 - » Dehumidistat mode
 - » ECO Mode (low-speed air exchange for 20 minutes of every hour)
 - » High Occupancy Mode (high-speed air exchange for 1, 2, or 4 hours when more people are in the space)
 - » Air exchanger maintenance indicator
 - » Relative humidity display
- 1" x 1" Liquid-crystal display
- Blue LED backlight (configurable as a nightlight)
- Compatible with 20/40/60 Minute Timer (P/N 611228)
- 24 VAC
- Fits inside 2" x 4" service box
- Includes retaining screws and white Decora™-style faceplate

For more information, contact your Aldes sales advisor, visit aldes-na.com, call 1.800.255.7749, or find us on

