



FAN CONTROLS

Electronic Fan-Light Timer

P/N 29 011 – Timer Switch Control

PRODUCT
SPECIFICATIONS
& TECHNICAL
DATA

DESCRIPTION

The ALDES Electronic Fan-Light Timer Switch Control is ideal for controlling a 120V load, such as a fan, Zone Register Terminal (ZRT), or light. Use for turning "ON" fan and light circuits simultaneously, and for turning the light "OFF" manually, allowing the fan to remain on for a manually pre-set delay time of 20, 40 or 60 minutes.

The LED display, which can be seen even in darkened rooms, indicates ON-OFF status and pre-set time delays of 20, 40 or 60 minutes. The selected delay time remains in memory until it is changed by the user.



The Decora™ style timer fits single or multi-gang wall boxes and includes both white and ivory overlays. Use for residential and commercial bathrooms. Electrical ratings: 120VAC, 60Hz, 1/6 HP, 500W Incandescent.

OPERATION INSTRUCTIONS

- The "SWITCH LOCATOR" LED is intended to remain ON to assist finding the switch in a darkened room.
- Press the top "ON/OFF" switch once to turn the fan and light ON.
- Press the top "ON/OFF" switch again to turn the light OFF. NOTE: the fan will remain ON for the selected time delay (factory default setting is 20 minutes).
- When the time delay is completed, the fan will automatically shut OFF.
- Press the bottom "TIME DELAY SELECTION SWITCH" to cycle the fan time delay to 20, 40 or 60 minutes. The corresponding LED will light, indicating the selected time period.
- NOTE: Both "TIME DELAY" LEDs indicate a 60-minute time period.

INSTALLATION INSTRUCTIONS

1. Turn power OFF at circuit breaker or fuse panel.
2. Remove wall plate and existing switch from the wall box, if one is presently installed.
3. Select white or ivory overlay to match decorator-style wall plate. Peel protective backing and apply overlay to the front rectangular recess of the time switch. Be sure to align push button and LED locations of overlay to the timer switch.
4. Refer to Wiring Diagram (at right), connect the wires from the fan/light timer switch to the wires in the wall box using the wire nuts provided.
5. Carefully place wires and switch into wall box and secure with the two mounting screws provided.
6. Install decorator-style wall plate (not included).
7. Turn power ON at circuit breaker or fuse panel.

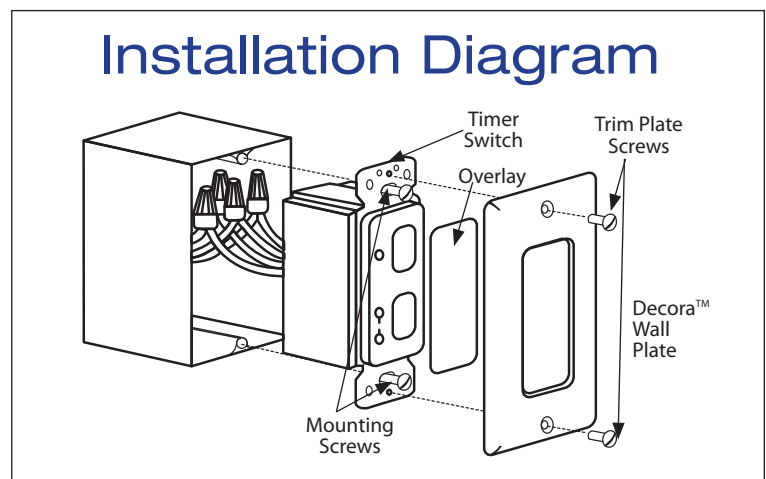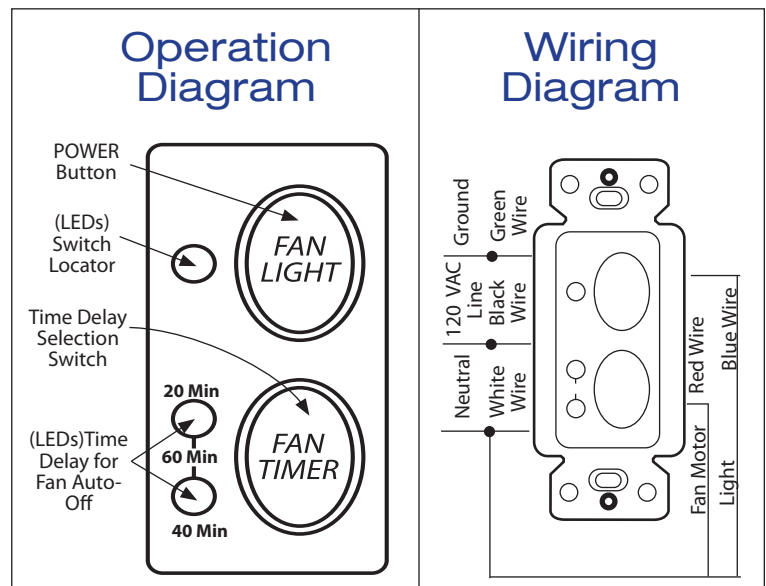

© 2013 American ALDES Ventilation Corporation. Reproduction or distribution, in whole or in part, of this document, in any form or by any means, without the express written consent of American ALDES Ventilation Corporation, is strictly prohibited. The information contained within this document is subject to change without prior written notice.